USER MANUAL

S203TA-D

S203RC-D

Advanced Energy Counter and Analyzer

SENECA s.r.l.

Via Austria 26, PADOVA – ITALY

Tel. +39.049.8705355 – 8705359 Fax. +39.049.8706287

Web site: www.seneca.it

Technical assistance: supporto@seneca.it (IT), support@seneca.it (Other)

Commercial reference: commerciale@seneca.it (IT), sales@seneca.it (Other)

This document is property of SENECA srl. Duplication and reprodution are forbidden, if not authorized. Contents of the present documentation refers to products and technologies described in it. All technical data contained in the document may be modified without prior notice Content of this documentation is subject to periodical revision.

To use the product safely and effectively, read carefully the following instructions before use. The product must be used only for the use for which it was designed and built. Any other use must be considered with full responsibility of the user. The installation, programmation and set-up is allowed only for authorized operators; these ones must be people physically and intellectually suitable. Set up must be performed only after a correct installation and the user must perform every operation described in the installation manual carefully. Seneca is not considered liable of failure, breakdown, accident caused for ignorance or failure to apply the indicated requirements. Seneca is not considered liable of any unauthorized changes. Seneca reserves the right to modify the device, for any commercial or construction requirements, without the obligation to promptly update the reference manuals.

No liability for the contents of this documents can be accepted. Use the concepts, examples and other content at your own risk. There may be errors and inaccuracies in this document, that may of course be damaging to your system. Proceed with caution, and although this is highly unlikely, the author(s) do not take any responsibility for that. Technical features subject to change without notice.

MI004070_110_EN

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Date	Revision	Notes
22/01/2014	15	-Add impulse time value on Digital Output chapter
02/04/2014	16	-Add Rogowski Coil full scale configuration in the modbus registers and S203RC-D electrical connection. -Modified the firmware update chapter
18/04/2014	17	-Add demand time calculation info
04/07/2014	18	-Add insertion info -Modified Terminal position chapters
23/03/2015	19	-Added RS485 Pinout
30/04/2015	_100	-Fixed Qabc formula in3 or 4 wires insertion
28/08/2015	_101	-Added new commands from firmware SW004300
10/09/2015	_102	-Added info on cutoff Modbus register
22/09/2015	_103	-Added Chapter “Setup a rogowski coil probe for S203RC-D model”
02/10/2015	_104	-Fixed Table values on chapter “Setup a rogowski coil probe for S203RC-D model” -Minor Fix
06/10/2015	_105	-Changed Active Power calculation from firmware SW004302
30/09/2016	_106	-Changed Rogowski’s coil Electrical Connections
23/02/2017	_107	-deleted register 40050 bit 1 because is not used -Fixed Baud Rate Register Values -Added Registers offset
01/03/2017	_108	- Digital output energy ratio fixed register “U32”
23/05/2017	_109	-Added Current/Voltage Sampling Speed info
12/06/2017	_110	(Changed for Firmware revision >= 4305) -Added new VAB, VBC, VCA Concatenated Voltages -Changed Display Values nomenclature -Changed VABC (now is referred to concatenated values)

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Table of contents

SENECA S203TA-D / S203RC-D 7

1. INTRODUCTION 8

1.1. FEATURES 8

1.2. ELECTRICAL MEASURE ON DISPLAY 8

1.3. ELECTRICAL MEASURE ON MODBUS RTU INTERFACE 9

1.4. ELECTRICAL MEASURE ON ANALOG OUTPUT 10

1.5. ELECTRICAL MEASURE ON DIGITAL OUTPUT 11

1.6. S203TA-D INSERTION TYPES 11

1.7. S203RC-D INSERTION TYPES 12

1.8. CURRENT/VOLTAGE SAMPLING SPEED 12

1.9. MEASURES RESPONSE TIME 12

2. S203TA-D ELECTRICAL CONNECTIONS 12

2.1. S203 TA-D TERMINAL POSITIONS 13

2.2. SINGLE PHASE INSERTION (1-PHASE INSERTION) 13

2.3. SINGLE PHASE INSERTION WITH CT (1-PHASE INSERTION) 14

2.4. SINGLE PHASE INSERTION WITH VT (1-PHASE INSERTION) 14

2.5. SINGLE PHASE INSERTION WITH CT AND VT (1-PHASE INSERTION) 14

2.6. ARON INSERTION WITH CTS (ARON INSERTION) 15

2.7. ARON INSERTION WITH CTS AND VTS (ARON INSERTION) 15

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

2.8. 4 WIRE WITH NEUTRAL INSERTION WITH CTS (4 WIRES INSERTION) 15

2.9. 3-PHASE WITHOUT NEUTRAL INSERTION WITH CTS (4 WIRES INSERTION) 15

2.10. 3-PHASE WITHOUT NEUTRAL INSERTION WITH CTS AND VTS (4 WIRES INSERTION) 16

3. S203RC-D ELECTRICAL CONNECTIONS 17

3.1. S203 RC-D TERMINAL POSITIONS.....18

3.2. SINGLE PHASE INSERTION (1-PHASE INSERTION).....18

3.3. SINGLE PHASE INSERTION WITH VT (1-PHASE INSERTION) 18

3.4. ARON INSERTION (ARON INSERTION).....19

3.5. ARON INSERTION WITH VTS (ARON INSERTION).....19

3.6. 4 WIRES WITH NEUTRAL INSERTION (4-WIRES INSERTION) 19

3.1. 3-PHASE WITHOUT NEUTRAL INSERTION (4-WIRES INSERTION).....20

3.2. 3-PHASE WITHOUT NEUTRAL INSERTION WITH VTS (4-WIRES INSERTION) 20

4. ANALOG OUTPUT 21

4.1. ANALOG OUTPUT IN VOLTAGE MODE CONNECTIONS.....21

4.2. ANALOG OUTPUT IN CURRENT ACTIVE MODE CONNECTIONS.....21

4.3. ANALOG OUTPUT IN CURRENT PASSIVE MODE CONNECTIONS 21

5. DIGITAL OUTPUT 22

5.1. DIGITAL OUTPUT ELECTRICAL CONNECTIONS.....22

7. THE DISPLAY.....23

7.1. ELECTRICAL SYMBOLS ON DISPLAY.....23

7.1.1. 3/4 WIRES INSERTION (WITH OR WITHOUT NEUTRAL) 23

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.1.2. 1 WIRE INSERTION 27

7.1.3. ARON INSERTION 28

7.2. DIAGNOSTICS PAGE 30

7.3. DISPLAY MENÙ 30

7.3.1. A) MEASURE CONFIG 31

7.3.1. B) CONFIG RS485 32

7.3.1. C) OUT MEASURE 33

7.3.1. D) COUNTERS 34

7.3.1. E) DISPLAY 35

7.3.1. F) USER TARATURES 37

8. ENERGY COUNTERS 39

8.1. ENERGY COUNTER OVERFLOW 39

8.2. NON VOLATILE MEMORY ENERGY BACKUP 40

9. SETUP A ROGOWSKI COIL PROBE FOR S203RC-D MODEL 41

10. SERIAL COMMUNICATION 43

10.1. RS485 SERIAL COMMUNICATION ELECTRICAL CONNECTION 43

10.2. MODBUS RTU PROTOCOL 44

10.2.1. ABBREVIATION USED 44

10.2.2. MODBUS REGISTER ADDRESSES 46

11. DEBUG LEDS 56

12. THE KIT-USB 57

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

13. WINDOWS USB DRIVERS INSTALLATION 58

14. OTHERS OPERATING SYSTEM DRIVERS: 59

15. EASY SETUP SOFTWARE FOR WINDOWS 60

15.1. FIRMWARE UPDATE 63

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Seneca **S203TA-D / S203RC-D**

CAUTION!

UNDER ANY CIRCUMSTANCES, SENECA S.R.L. OR ITS SUPPLIERS SHALL NOT BE RESPONSIBLE FOR LOSS OF RECORDING DATA/INCOMES OR FOR* CONSEQUENTIAL OR INCIDENTAL DAMAGE DUE TO NEGLECT OR RECKLESS MISHANDLING *OF S203TA-D/S203RC-D, EVEN THOUGH SENECA IS WELL AWARE OF THESE POSSIBLE DAMAGES.

SENECA, ITS SUBSIDIARIES, AFFILIATES, COMPANIES OF THE GROUP, ITS SUPPLIERS AND RETAILERS SHALL NOT GUARANTEE THAT THE FUNCTIONS WILL SATISFY COMPLETELY CUSTOMER'S EXPECTATIONS OR THAT S203TA-D/S203RC-D , THE FIRMWARE AND THE SOFTWARE SHALL HAVE NO ERRORS OR WORK CONTINUOUSLY.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1. Introduction

Models S203TA-D and S203RC-D are a complete three-phase energy analyzers with display, suited for use with up to 600Vac voltage range (without a TV transformer), and max current equal to 5A (without a TA transformer) connected to the inputs. A double serial interface (USB or RS485) it's also available (Modbus RTU protocol).
Analog and digital outputs can be connected to the electrical measure.

1.1. Features

- Energy values backup (FeRAM backup values without battery need)
- Last screen page displayed backup (FeRAM backup without battery need)
- Easy configurable by free configuration software or by display menu
- RS485 serial communication with MODBUS-RTU protocol, maximum 32 nodes.
- USB serial communication with Modbus RTU protocol for registers access and configuration
- High precision: 0,2%class (S203TA-D).
- Protection against ESD discharge up to 4 kV.
- Measure input insulation: 4000 Vac towards all the other circuits.
- Insulation between communication and power supply: 1500Vac.
- Insulation between retransmitted output and power supply: 1500Vac.
- Analog output signal settable in voltage or current.
- Digital output pulse signal for Energy or Energy sign.
- Possibility for connection and management by external CTs with 5A output.
- Possibility for connection and management by external VTs.
- All kind of insertion possible: single phase, Aron, 4-wires, 3-wires .
- Possibility to compensate errors caused by frequency change in places where network frequency is not stable (frequency changes > 30 mHz).
- USB Firmware update
- Easy-wiring of power supply and serial bus by means of the bus housed in the DIN rail.
- S203RC-D can be used with rogowski coil of various full scale

1.2. Electrical Measure on Display

The instruments provide all the following electrical measurable quantities by the display:

- VA (phase A to neutral)
- VB (phase B to neutral)
- VC (phase C to neutral)
- V ABC 3-phase
- VAB
- VBC
- VCA
- I phase A
- I phase B
- I phase C
- I 3-phase
- P ACTIVE phase A
- P ACTIVE phase B
- P ACTIVE phase C
- P ACTIVE 3-phase
- Q reactive phase A
- Q reactive phase B
- Q reactive phase C

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

- Q reactive 3-phase
- S apparent phase A
- S apparent phase B
- S apparent phase C
- S apparent 3-phase
- Power Factor phase A
- Power Factor phase B
- Power Factor phase C
- Power Factor 3-phase
- Active Energy phase A
- Active Energy phase B
- Active Energy phase C
- Active Energy 3-phase
- Only positive Active Energy 3-phase
- Only negative Active Energy 3-phase
- Phase A frequency
- Reactive Energy phase A
- Reactive Energy phase B
- Reactive Energy phase C
- Reactive Energy 3-phase
- Only positive Reactive Energy 3-phase
- Only negative Reactive Energy 3-phase
- Maximum P Active value phase A
- Maximum P Active value 3-phase
- Maximum Q Reactive value phase A
- Maximum Q Reactive value 3-phase
- Average Active power 3-phase/A-phase value for demand time (configurable).

1.3. Electrical Measure on Modbus RTU Interface

By the serial RS485 or USB (Modbus RTU Protocol) the following electrical measurable quantities are available:

- VA (phase A to neutral)
- VB (phase B to neutral)
- VC (phase C to neutral)
- V 3-phase
- VAB
- VBC
- VCA
- I phase A
- I phase B
- I phase C
- I 3-phase
- P ACTIVE phase A
- P ACTIVE phase B
- P ACTIVE phase C
- P ACTIVE 3-phase
- Q reactive phase A
- Q reactive phase B
- Q reactive phase C
- Q reactive 3-phase
- S apparent phase A

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

- S apparent phase B
- S apparent phase C
- S apparent 3-phase
- Cosfi phase A
- Cosfi phase B
- Cosfi phase C
- Cosfi 3-phase
- Active Energy phase A
- Active Energy phase B
- Active Energy phase C
- Active Energy 3-phase
- Only positive Active Energy phase A
- Only positive Active Energy phase B
- Only positive Active Energy phase C
- Only positive Active Energy 3-phase
- Only negative Active Energy phase A
- Only negative Active Energy phase B
- Only negative Active Energy phase C
- Only negative Active Energy 3-phase
- Phase A frequency
- Reactive Energy phase A
- Reactive Energy phase B
- Reactive Energy phase C
- Reactive Energy 3-phase
- Only positive Reactive Energy phase A
- Only positive Reactive Energy phase B
- Only positive Reactive Energy phase C
- Only positive Reactive Energy 3-phase
- Only negative Reactive Energy phase A
- Only negative Reactive Energy phase B
- Only negative Reactive Energy phase C
- Only negative Reactive Energy 3-phase
- Maximum P Active value phase A
- Maximum P Active value 3-phase
- Maximum Q Reactive value phase A
- Maximum Q Reactive value 3-phase
- Average Active power 3-phase/A-phase value for demand time (configurable).

1.4. Electrical Measure on Analog Output

The modules can put to the analog output (configurable in current 0-20 mA, 4-20 mA or voltage 0-10 V) one of the following electrical measurable quantities :

- VA (phase A to neutral)
- VB (phase B to neutral)
- VC (phase C to neutral)
- V 3-phase
- I phase A
- I phase B
- I phase C
- I 3-phase
- P ACTIVE phase A
- P ACTIVE phase B
- P ACTIVE phase C

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

- P ACTIVE 3-phase
- Cosfi phase A
- Cosfi phase B
- Cosfi phase C
- Cosfi 3-phase

1.5. Electrical Measure on Digital Output

The modules can put to the digital output (pulse weight configurable) one of the following electrical measurable quantities :

- Positive Active Energy phase A
- Positive Active Energy phase B
- Positive Active Energy phase C
- Negative Active Energy phase A
- Negative Active Energy phase B
- Negative Active Energy phase C
- 3-phase only positive Active Energy
- 3-phase only negative Active Energy
- Positive Reactive Energy phase A
- Positive Reactive Energy phase B
- Positive Reactive Energy phase C
- Negative Reactive Energy phase A
- Negative Reactive Energy phase B
- Negative Reactive Energy phase C
- 3-phase only positive Reactive Energy
- 3-phase only negative Reactive Energy

1.6. S203TA-D Insertion types

The following insertion types are possible (CT = current transformer, VT = voltage transformer):

- Single phase insertion
- Single phase insertion with CT
- Single phase insertion with VT
- Single phase insertion with CT and VT
- Aron insertion with CTs
- Aron insertion with CTs and VTs
- 3-phase insertion with neutral with CTs
- 3-phase insertion without neutral with CTs
- 3-phase insertion without neutral with CTs and VTs

WARNING!

ARON insertion without CTs it's not allowed (two phases are short circuited!)
3-PHASE insertion without CTs it's not allowed (the phases are short circuited!)

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

1.7. S203RC-D Insertion types

- Single phase insertion
- Single phase insertion with VT
- Aron insertion
- Aron insertion with VTs
- 3-phase insertion with neutral
- 3-phase insertion with neutral with VTs
- 3-phase insertion without neutral
- 3-phase insertion without neutral with VTs

1.8. Current/Voltage Sampling Speed

The Current Sampling Speed is 26.04 Ksample for second (26040 Samples for second).

The Voltage Sample Speed is 260 Hz.

1.9. Measures response time

- S203TA-D (Typical):
  63% IRMS 80 ms
  100% IRMS 1000 ms
  63% VRMS 100 ms
  100% VRMS 960 ms

- S203RC-D (Typical):
  63% IRMS 40 ms
  100% IRMS 1680 ms
  63% VRMS 100 ms
  100% VRMS 960 ms

  Analog Output Response Time: Typical 10 ms (10-90%)
  Modbus Response Time: Typical 5 ms

2. S203TA-D Electrical Connections

DANGER!


Never open the secondary circuit of CT under applying current to load.
Never remove the terminal block under applying current to load, will cause electric shock or breakdown CT

WARNING!

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

- ***ARON insertion without CTs it's not allowed (two phases are short circuited!)***
- ***3-PHASE insertion without CTs it's not allowed (the phases are short circuited!)***
- ***You can't connect the secondary of any CTs to the Earth.***
- ***Terminals 14, 16 18 and 22 are internally connected!***
- ***Use CT with the secondary side current is 5A***
- ***All CTs connected should be the same.***
- ***When connecting CT, connect the secondary side to the terminal of the main unit first, and after that wire the primary side to a load electric wire. Incorrect order might cause an electric shock or break CT.***
- ***The CT has polarity. Wrong direction can't measure correctly (for example negative current value instead of positive)***
- ***If there is some distortion by harmonic or waveform, it may not measure correctly.***
- ***Separate the wiring (strong electric part) of the measured voltage input terminal (operating power supply terminal) from the CT cable. It may not satisfy the accuracy due to noise.***
- ***Current Terminals Max 5A, Voltage Terminals Max 600V***

2.1. S203 TA-D Terminal Positions

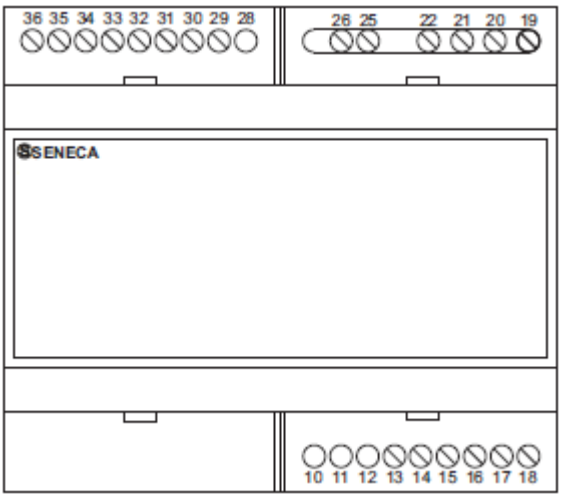


2.2. Single phase insertion (1-phase insertion)


WARNING!

Pay attention to the different terminals positions in this schematics:


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

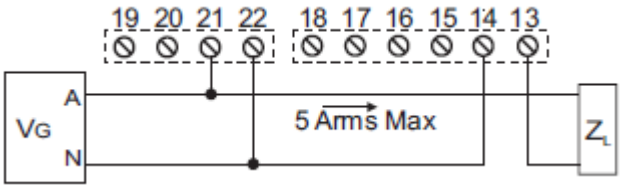

2.3. Single phase insertion with CT (1-phase insertion)

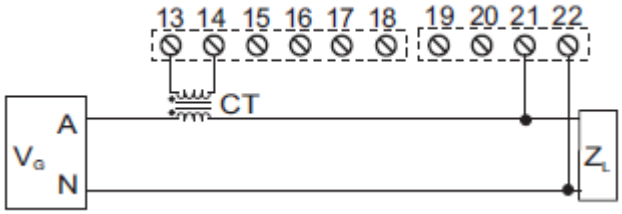


2.4. Single phase insertion with VT (1-phase insertion)

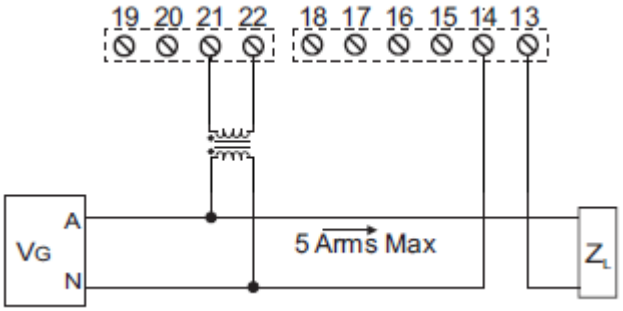


I MAX = 5 A

2.5. Single phase insertion with CT and VT (1-phase insertion)

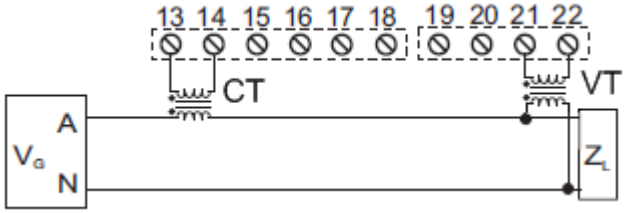


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


2.6. Aron insertion with CTs (Aron insertion)

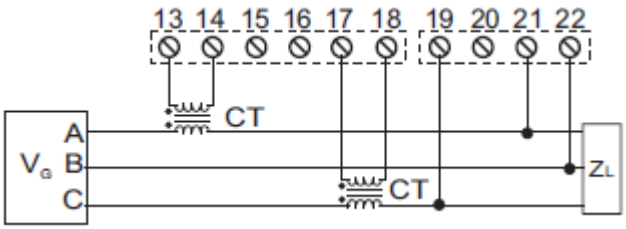

2.7. Aron insertion with CTs and VTs (Aron insertion)

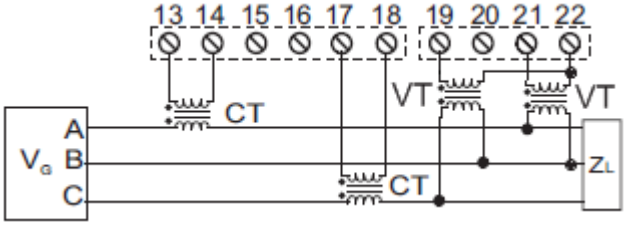


2.8. 4 wire with neutral insertion with CTs (4 wires insertion)

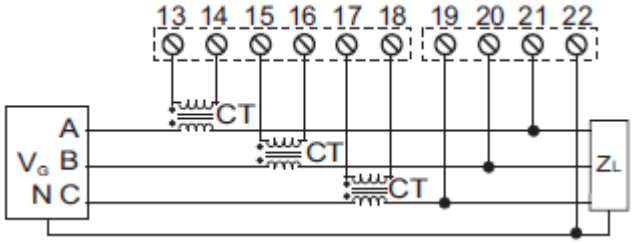

2.9. 3-phase without neutral insertion with CTs (4 wires insertion)


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

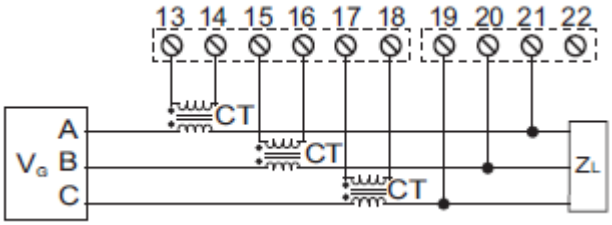

NOTE!

For use this insertion configure 4-wires insertion (for 3-wires with neutral insertion or 3-wires without neutral insertion S203TA/RC-D must be configured in "4-wires insertion").

2.10. 3-phase without neutral insertion with CTs and VTs (4 wires insertion)

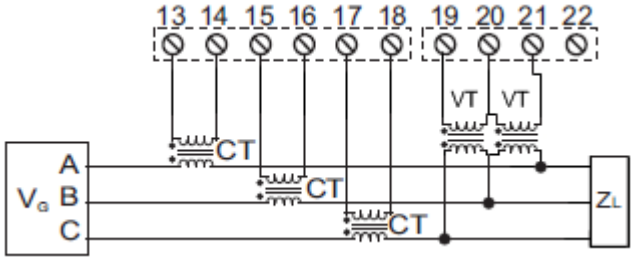


NOTE!

For use this insertion configure 4-wires insertion (for 3-wires with neutral insertion or 3-wires without neutral insertion S203TA/RC-D must be configured in "4-wires insertion").

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

3. S203RC-D Electrical Connections

ROGOWSKI'S COIL WARNING!

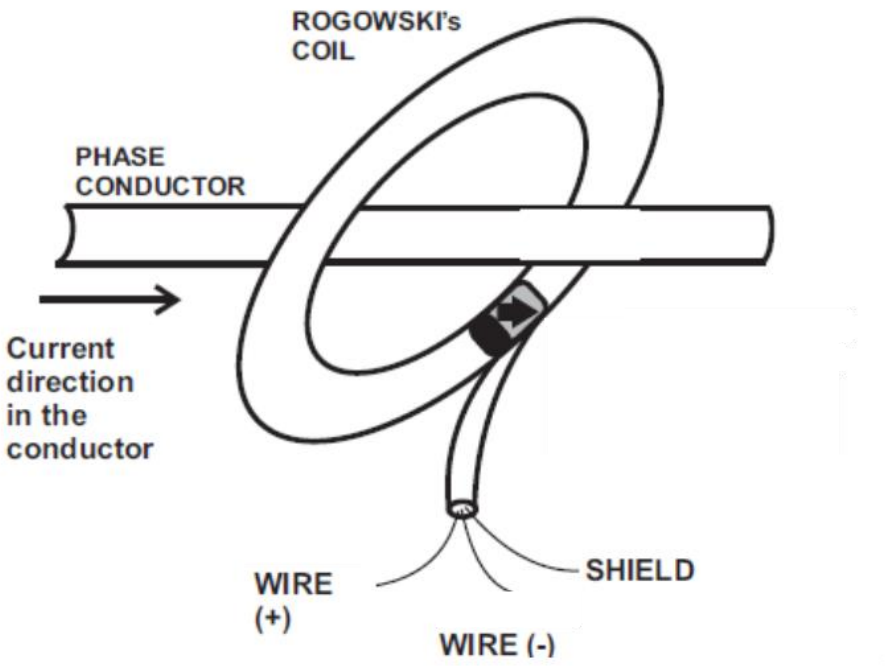


Rogowski's coil have been designed for accurate nonintrusive measurement of AC, pulsed DC or complex waveforms.
To use in an appropriate way:
- wrap the ring on the conductor so that the arrow symbol (stamped in the ring) is oriented in the same direction of the current in the conductor (see Rogowski's coil manual for more info)
- make sure that the connections are performed properly: the positive wire on (+) termianl, the negative wire on the (-). Connect the shield wire with the (-) wire.

WARNING!


- ***The S203RC-D is without inverting input***
- ***Connect the shield of the Rogowski's coil at negative (-) (one of the terminals 14 or 16 or 18 or 22).***
- ***Terminals 14, 16 18 and 22 are internally connected***
- ***Voltage Terminals Max 600V***
- ***The Rogowski has polarity. Wrong direction can't measure correctly (for example negative current value instead of positive)***
- ***If there is some distortion by harmonic or waveform, it may not measure correctly.***
- ***Separate the wiring (strong electric part) of the measured voltage input terminal (operating power supply terminal) from the CT cable. It may not satisfy the accuracy due to noise.***
- ***The S203RC-D input full scale factory calibrated IS ONLY THE +-100mV. Others full scale configurable are +-50 mV or +- 200mV for better measure precision, but in this cases you must manually set the currents user calibration values.***

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


3.1. S203 RC-D Terminal Positions

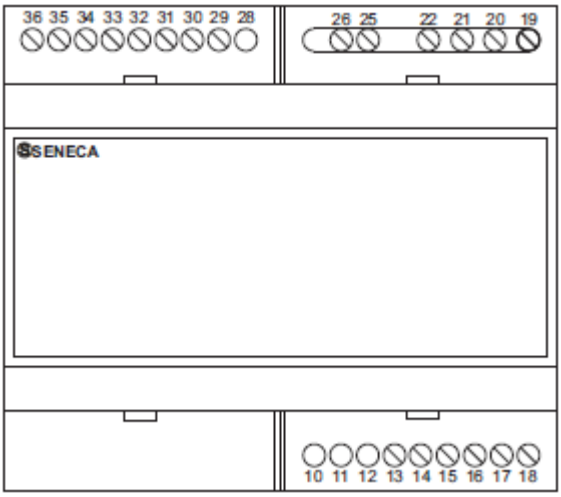

3.2. Single phase insertion (1-phase insertion)

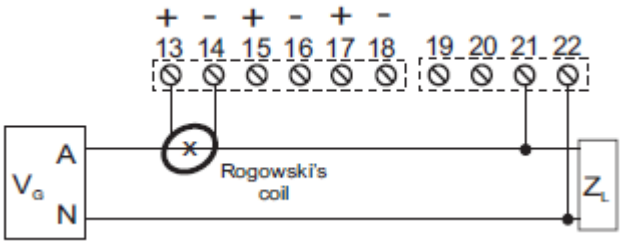


3.3. Single phase insertion with VT (1-phase insertion)

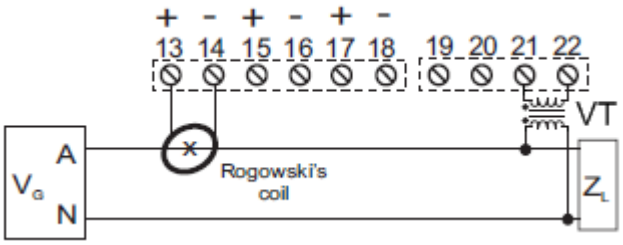


Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


3.4. Aron insertion (Aron insertion)

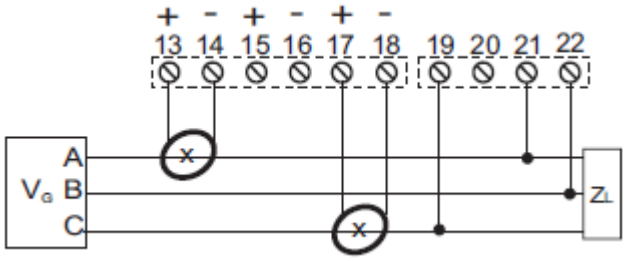

3.5. Aron insertion with VTs (Aron insertion)

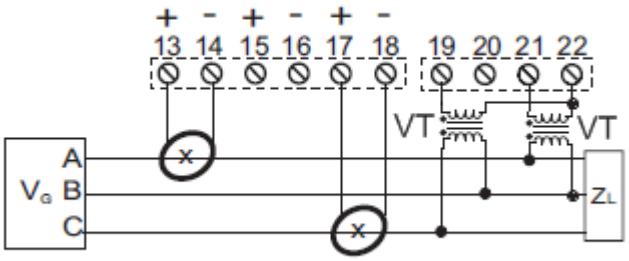


3.6. 4 wires with neutral insertion (4-wires insertion)

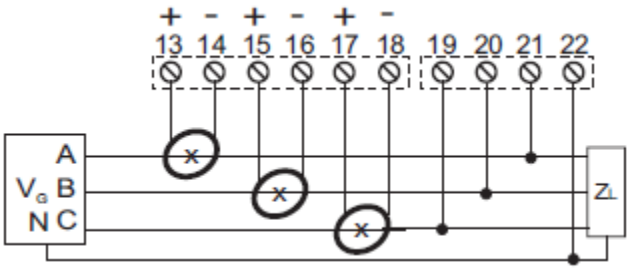

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


3.1. 3-phase without neutral insertion (4-wires insertion)

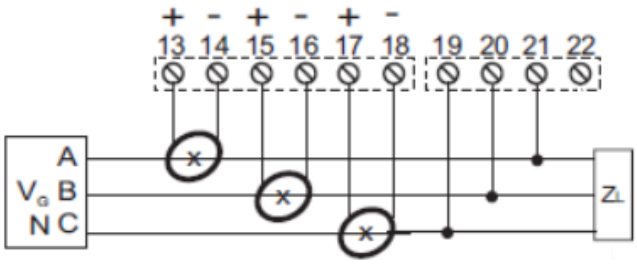

NOTE!

For use this insertion configure 4-wires insertion (for 3-wires with neutral insertion or 3-wires without neutral insertion S203TA/RC-D must be configured in "4-wires insertion").

3.2. 3-phase without neutral insertion with VTs (4-wires insertion)

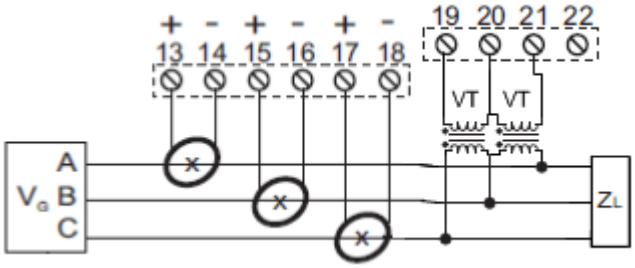

NOTE!

For use this insertion configure 4-wires insertion (for 3-wires with neutral insertion or 3-wires without neutral insertion S203TA/RC-D must be configured in "4-wires insertion").

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


4. Analog Output

The module provides a programmable, analog output in voltage (range 0..10 Vdc) or active and passive current (range 0..20 mA).
We recommend using shielded cables for the electric connections.


WARNING

There is no insulation between RS485, USB and the analog output

4.1. Analog Output in voltage mode connections

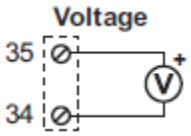

4.2. Analog Output in current active mode connections

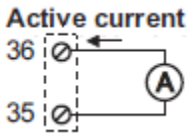


4.3. Analog Output in current passive mode connections

WARNING

Vext MAX = 24V DC

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

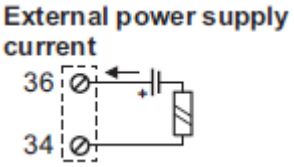

5. Digital Output

The module has a digital output: configurable in two different modes:
-Each pulse corresponds to a given number of increments of to the Active or Reactive energy counter
-The output is linked to the sign of the Active power

The impulse duration is fixed in 200ms.

For more informations, see the display menù chapter.

5.1. Digital Output electrical connections

An external DC Voltage source is needed for using the digital output, a relay can be connected (see figure below).

WARNING!

I max= 50 mA


V max= 28V dc



Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7. The display

By the display the electrical measures are viewable in real time, also a display configuration menù it's available.

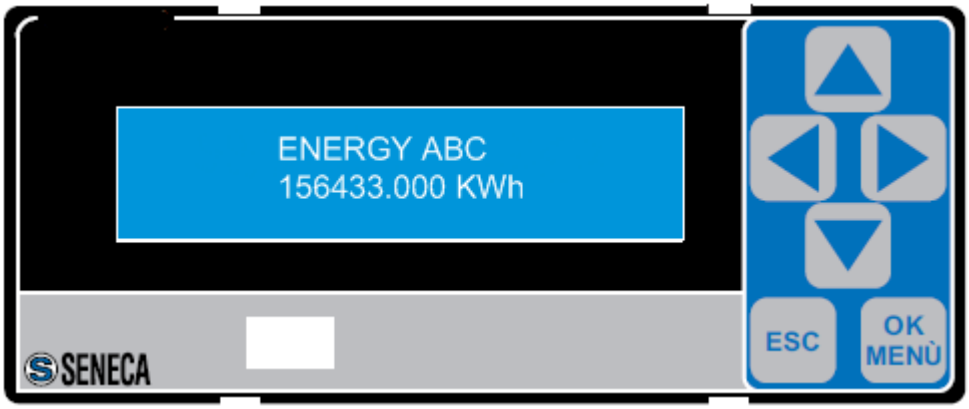

7.1. Electrical symbols on Display

By pressing the button OK/MENU' it's possible to switch to the next measure visualization.

You can return to the previous measures by pressing the ESC button.

When a new page is selected, the page is first saved into the FeRAM and then displayed, so if the module it's switched off and then on the last page displayed it's visualized.

The Measure displayed depends from the insertion type (the following measures are in visualization order):

7.1.1. 3/4 wires insertion (with or without neutral)

DISPLAY *ELECTRICAL QUANTITY* *SYMBOL*	*COMMENT*	*MEASURED VALUE*	*CALCULATED VALUE*	*EQUATION USED*
VAB	RMS Voltage from phase A to phase B		X	VA*√3
VBC	RMS Voltage from phase B To phase C		X	VB*√3
VCA	RMS Voltage from phase C To phase A		X	VC*√3

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

VABC	RMS Three phase Voltage		X	$\frac{VAB + VBC + VCA}{3}$
I A	RMS phase A current	X		-
I B	RMS phase B current	X		-
I C	RMS phase C current	X		-
I ABC	RMS Three phase Current		X	$\frac{IrmsA + IrmsB + IrmsC}{3}$
P A	Phase A Active Power		X	$IrmsA \times VrmsA \times cos\varphi_A$
P B	Phase B Active Power		X	$IrmsB \times VrmsB \times cos\varphi_B$
P C	Phase C Active Power		X	$IrmsC \times VrmsC \times cos\varphi_C$
P ABC	Three phase active power		X	$P\ A + P\ B + P\ C$
Q A	Phase A Reactive Power		X	$\pm\sqrt{(S\ A)^2 - (P\ A^{measured^2})}$
Q B	Phase B Reactive Power		X	$\pm\sqrt{(S\ B)^2 - (P\ B^{measured^2})}$
Q C	Phase C Reactive Power		X	$\pm\sqrt{(S\ C)^2 - (P\ C^{measured^2})}$
Q ABC	Three phase reactive power		X	$Q\ A + Q\ B + Q\ C$
S A	Phase A Apparent power		X	$VRMS\ A \times IRMS\ A$
S B	Phase B		X	

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	Apparent power			$VRMS\ B \times IRMS\ B$
S C	Phase C Apparent power		X	$VRMS\ C \times IRMS\ C$
S ABC	Three phase apparent power		X	$S\ A + S\ B + SC$
PF A	Phase A Power Factor		X	$\frac{PA^{Measured}}{S\ A}$
PF B	Phase B Power Factor		X	$\frac{PB^{Measured}}{S\ B}$
PF C	Phase C Power Factor		X	$\frac{PC^{Measured}}{S\ C}$
PF ABC	Three phase Power Factor		X	$\frac{P\ A^{Measured} + PB^{Measured} + PC^{Measured}}{S\ ABC}$
ENERGY A	Phase A Active Energy		X	$\int P\ A^{Measured}{}_i\ dt$
ENERGY B	Phase B Active Energy		X	$\int P\ B^{Measured}{}_i\ dt$
ENERGY C	Phase C Active Energy		X	$\int P\ C^{Measured}{}_i\ dt$
ENERGY ABC	Three phase active energy		X	$ENERGY\ A + ENERGY\ B + ENERGY\ C$
POS ENERGY ABC	Three phase only positive active energy		X	$POS\ ENERGY\ A + POS\ ENERGY\ B + POS\ ENERGY\ C$
NEG ENERGY ABC	Three phase only negative		X	$NEG\ ENERGY\ A + NEG\ ENERGY\ B + NEG\ ENERGY\ C$

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	active energy			
REACT ENERGY A	Phase A Reactive Energy		X	$\int Q\ A_i\ dt$
REACT ENERGY B	Phase B Reactive Energy		X	$\int Q\ B_i\ dt$
REACT ENERGY C	Phase C Reactive Energy		X	$\int Q\ C_i\ dt$
REACT ENERGY ABC	Three phase Reactive energy		X	$REACT\ ENERGY\ A + REACT\ ENERGY\ B + REACT\ ENERGY\ C$
POS REACT EN ABC	Three phase only positive Reactive energy		X	$POS\ REACT\ ENERGY\ A + POS\ REACT\ ENERGY\ B + POS\ REACT\ ENERGY\ C$
NEG REACT EN ABC	Three phase only negative Reactive energy		X	$NEG\ REACT\ ENERGY\ A + NEG\ REACT\ ENERGY\ B + NEG\ REACT\ ENERGY\ C$
P MAX ABC	Three phase maximum active power		X	$MAX(\lvert P^{measured}\ ABC\rvert)$
Q MAX ABC	Three phase maximum reactive power		X	$MAX(\lvert Q\ ABC\rvert)$
P AVG ABC	Three phase average active power for the last n minutes		X	$\frac{\sum_1^n P^{measured}{}_i}{n}$
FREQUENCY	Frequency	X		Measured from phase A

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.1.2. 1 wire insertion

DISPLAY *ELECTRICAL QUANTITY* *SYMBOL*	*COMMENT*	*MEASURED VALUE*	*CALCULATED VALUE*	*EQUATION USED*
VA	V PHASE A RMS Voltage from phase A to NEUTRAL	X		-
IA	RMS phase A current	X		-
P A	Phase A Active Power		X	$VRMS\ A \times IRMS\ A \times Cos\varphi_A$
Q A	Phase A Reactive Power		X	$\pm\sqrt{(S\ A)^2 - (P\ A^{measured^2})}$
S A	Phase A Apparent power		X	$VRMS\ A \times IRMS\ A$
PF A	Phase A Power Factor		X	$\frac{P\ A^{measured}}{S\ A}$
ENERGY A	Phase A Active Energy		X	$\int P\ A^{measured}{}_i\ dt$
POS ENERGY A	One phase only positive active energy		X	$\int P\ A^{measured}\ (+)_i\ dt$
NEG ENERGY A	One phase only negative active energy		X	$\int P\ A^{measured}\ (-)_i\ dt$
REACT ENERGY A	Phase A Reactive Energy		X	$\int Q\ A_i\ dt$
POS REACT EN A	Phase A only positive Reactive		X	$\int Q\ A\ (+)_i\ dt$

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	energy			
NEG REACT EN A	Phase A only negative Reactive energy		X	$\int Q\ A\ (-)_i\ dt$
P MAX A	Phase A maximum active power		X	$MAX(\lvert P\ A^{measured}\rvert)$
Q MAX A	Phase A maximum reactive power		X	$MAX(\lvert Q\ A\rvert)$
P AVG A	Phase A average active power for the last n minutes		X	$\frac{\sum_1^n P^{measured}{}_i}{n}$
FREQUENCY	Frequency	X		Measured from phase A

7.1.3. Aron insertion

DISPLAY ***ELECTRICAL QUANTITY*** ***SYMBOL***	***COMMENT***	***MEASURED VALUE***	***CALCULATED VALUE***	***EQUATION USED***
V AC	V AC RMS Voltage from phase A to C	X		-
V BC	V BC RMS Voltage From phase B to C	X		-
I A	RMS phase A current	X		-

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

I C	RMS phase C current	X		-
P AC	Phase A C Active Power		X	$V\ AC \times IA\ \times Cos\varphi_A$
P BC	Phase B C Active Power		X	$V\ BC \times IC\ \times Cos\varphi_C$
P ABC	Three phase active power		X	$P\ AC + P\ BC$
Q ABC	Three phase reactive power		X	$\sqrt{3}\ \times (P\ AC^{measured} - P\ BC^{measured})$
S ABC	Three phase apparent power		X	$\sqrt{3}\ \times \frac{(S\ A + S\ C)}{2}$
PF ABC	Three phase Power Factor		X	$\frac{P\ AC + P\ BC}{\sqrt{(P\ AC + P\ BC)^2 + 3 * (P\ AC - P\ BC)^2}}$
ENERGY ABC	Three phase active energy		X	$\int P\ ABC^{measured}{}_i\ dt$
POS ENERGY ABC	Three phase only positive active energy		X	$\int P\ ABC^{measured}\ (+)_i\ dt$
NEG ENERGY ABC	Three phase only negative active energy		X	$\int P\ ABC^{measured}\ (-)_i\ dt$
REACT ENERGY ABC	Three phase Reactive energy		X	$\int Q\ ABC_i\ dt$
POS REACT EN ABC	Three phase only positive Reactive energy		X	$\int Q\ ABC\ (+)_i\ dt$
NEG REACT EN ABC	Three phase only negative Reactive energy		X	$\int Q\ ABC\ (-)_i\ dt$
P MAX ABC	Three phase		X	

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	maximum active power			$MAX(\|P\ ABC^{measured}\|)$
Q MAX ABC	Three phase maximum reactive power		X	$MAX(\|Q\ ABC\|)$
P AVG ABC	Three phase average active power for the last n minutes		X	$\frac{\sum_1^n P^{measured}{}_i}{n}$
FREQUENCY	Frequency	X		Measured from phase A

7.2. Diagnostics Page

If S203TA-D / S203RC-D is configured for a 3 or 4-wires insertion, a diagnostics page will be displayed after the standard measures.

The upper line of diagnostics page shows the connection status of the three phases. If the phases are connected properly the line displayed will be “A->B->C OK”, otherwise “A->B->C ERROR”.

The lower line of diagnostics page informs the user about errors on currents connections:

If the Phase A,B and C Currents have not the same sign the display write “IA+- IB+- IC+- ERR”

If the Phase A,B and C Currents have the sign + the display write “ENERGY CONSUMPTION”

If the Phase A,B and C Currents have the sign - the display write “ENERGY PRODUCTION”

7.3. Display Menu

By the display menu it’s possible to setup the S203TA-D / S203RC-D, for a faster configuration you can also use a PC with the free software Easy Setup downloadable from www.seneca.it.

For enter to the Menù press the button OK/Menù for 5 seconds.

By pressing the UP or DOWN menù it’s possible to change the parameter to edit, confirm by pressing the OK/MENU’ button or ESC button to exit from the menu:

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.1. A) Measure config

PARAMETER	VALUES
A1) USING TA	To be used only for S203TA-D model, for S203RC-D model use only NO YES= A Current Transformer it's connected to A, B and C phases NO = No Current transformer used DEFAULT: NO
A2) TA RATIO	Current Transformer ratio value. The transformer secondary it's 5A. Example: for a 100/5 (100:5) Current transformer type 100,000. All current values will be multiplied for a factor of 20. Default: 5,000 (TA 5/5)
A3) FREQUENCY COMPENSATION	YES = The S203TA/RC-D will compensate the frequency fluctuation (use only if the source frequency it's not stable) NO = no frequency fluctuation compensation used Default: NO
A4) POWER FREQUENCY	50 Hz = 50 Hz calibration values will be used (for European 50 Hz power frequency) 60 Hz = 60 Hz calibration values will be used Default: 50Hz
A5) INSERTION TYPE	1-PHASE = For 1 phase insertions 3 OR 4 WIRE = For 3-phase with or without neutral insertion ARON = For 3-phase Aron insertion Default: 3 OR 4 WIRE
A6) TV RATIO	Voltage Transformer ratio value. If no Voltage Transformer it's used type 1,000. Example: for a 1:100 voltage transformer type 100,000.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	All voltage values will be multiplied for a factor of 100. Default: 1,000

7.3.1. B) Config RS485

PARAMETER	*VALUES*
B1) ADDRESS	Modbus RTU station address from 1 to 253 Default: 1
B2) BAUDRATE	Serial RS485 baudrate, can be: 2400 baud 4800 baud 9600 baud 19200 baud 38400 baud 57600 baud 115200 baud Default: 38400 baud
B3) PARITY	Parity bit, can be: NONE ODD EVEN Default: NONE
B4) STOP BIT	Stop bit, can be: 1 stop bit 2 stop bits Default: 1 stop bit

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.1. C) Out Measure

PARAMETER	VALUES
C1) OUTPUT PHASE	Phase to link to the analog output: 3-phase = ABC measure value Phase A = phase A measure Phase B = phase B measure Phase C = phase C measure Default: 3-phase
C2) OUT MEASURE	Measure to link to the analog output: VRMS = Vrms linked to the analog output IRMS = Irms linked to the analog output PACT= Active Power linked to the analog output COSFI= Power factor linked to the analog output Default: PACT
C3) IN STARTSCALE	Start Scale Measure linked to the output With this measure value the output will be at 0% Default: 0.0 W
C4) IN ENDSCALE	End Scale Measure linked to the output With this measure value the output will be at 100% Default: 9000.0 W
C5) OUTPUT TYPE	Analog output type: mA = Output in current mode V = Output in voltage mode Default: mA
C6) OUT STARTSCALE	Start Value for analog output (0%) when the input measure = IN STARTSCALE Default: 4.0 mA

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

C7) OUT ENDSCALE	End Value for analog output (100%) when the input measure = IN ENDSCALE Default: 20.0 mA

7.3.1. D) Counters

PARAMETER	*VALUES*
D1) Measure Unit	Active Energy measure unit: KWh MWh Wh mWh Default: KWh
D2) Digital Output function	Digital output mode: Pulse counter = Output mode in pulse mode, 1 pulse will be generated for every integer Measure unit Energy increment Energy sign = Output mode in sign mode (digital out high if active power is positive, digital output low if active power is negative) Default: Pulse counter
D3) Dig out ratio	If the Digital output mode is in “Pulse Counter mode” the digital output generate a pulse for every Dig out ratio integer value. For example: If Dig out ratio = 1 KWh the digital output will generate a pulse for every Kwh Energy increment If Dig out ratio = 100 KWh the digital output will generate a pulse for every 100Kwh Energy increment The value of 0.000 it’s used when the digital output function it’s in “Energy sign mode”. Default: 1 KWh

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.1. E) Display

PARAMETER	VALUES
E1) LANGUAGE	Set the menu language: English Italiano Default: English
E2) DISPLAY MODE	Can set for the automatic cycle of all screen measures: Manual loop = Change the display screen by pressing OK/Menù for NEXT, ESC for PREVIOUS measure Automatic loop = Automatically change the screen measure (in this mode the screen page backup feature it's not available) Default: Manual Loop
E3) PASSWORD	Can be used for restrict the access to the menu by typing a password. NO = No password is required for access to the menù YES = The password 5477 is required for access to the menu Default: NO
D4) COUNT DIGOUT	When the digital output is in "pulse mode" the measure linked to the digital output can be: 3ph pos energy 3ph neg energy Pos energy A Pos energy B Pos energy C Neg energy A Neg energy B Neg energy C

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	3ph pos react energy 3ph neg react energy Pos react energy A Pos react energy B Pos react energy C Neg react energy A Neg react energy B Neg react energy C Default 3ph pos energy
D5) DIGOUT PHASE	When the digital output is in “sign mode” the sign linked to the digital output can be from: Phase A Active Power Phase B Active Power Phase C Active Power 3-phase Active Power Phase A Reactive Power Phase B Reactive Power Phase C Reactive Power 3-phase Reactive Power Default: 3-phase
D6) DIGOUT LOGIC	Digital output logic can be: Normally open Normally close Default: normally open

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

7.3.1. F) User Taratures

PARAMETER	VALUES
F1) VOLT PHASE A	Set a multiplication factor for VRMS A Default: 1,000
F2) VOLT PHASE B	Set a multiplication factor for VRMS B Default: 1,000
F3) VOLT PHASE C	Set a multiplication factor for VRMS C Default: 1,000
F4) CURRENT PHASE A	Set a multiplication factor for IRMS A Default: 1,000 **ONLY FOR S203RC-D model:** For Rogowski coil of 100mV/1000A use multiplication factor of 1,000 (factory default) Else use this formula: Multiplication factor = (S203RC-D Full scale Input [mv]/ Full scale rogowski [mV])*(Full scale rogowski[A]/1000) for example: Input full scale of +-100mV and Rogowski coil of 100mV/500A use 0,500 Input full scale of +-100mV and Rogowski coil of 100mV/2000A use 2,000 Input full scale of +-200mV and Rogowski coil of 200mV/2000A use 2,000 Etc…
F5) CURRENT PHASE B	Set a multiplication factor for IRMS B Default: 1,000 **ONLY FOR S203RC-D model:** For Rogowski coil of 100mV/1000A use multiplication factor of 1,000 (factory default) Else use this formula: Multiplication factor = (S203RC-D Full scale Input [mv]/ Full scale rogowski [mV])*(Full scale rogowski[A]/1000) for example:

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	Input full scale of +-100mV and Rogowski coil of 100mV/500A use 0,500 Input full scale of +-100mV and Rogowski coil of 100mV/2000A use 2,000 Input full scale of +-200mV and Rogowski coil of 200mV/2000A use 2,000 Etc…
F6) CURRENT PHASE C	Set a multiplication factor for IRMS C Default: 1,000 **ONLY FOR S203RC-D model:** For Rogowski coil of 100mV/1000A use multiplication factor of 1,000 (factory default) Else use this formula: Multiplication factor = (S203RC-D Full scale Input [mv]/ Full scale rogowski [mV])*(Full scale rogowski[A]/1000) for example: Input full scale of +-100mV and Rogowski coil of 100mV/500A use 0,500 Input full scale of +-100mV and Rogowski coil of 100mV/2000A use 2,000 Input full scale of +-200mV and Rogowski coil of 200mV/2000A use 2,000 Etc…

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8. Energy Counters

The Energy Values are incremented independently:

Positive Active Energy Phase A

Positive Active Energy Phase B

Positive Active Energy Phase C

Negative Active Energy Phase A

Negative Active Energy Phase B

Negative Active Energy Phase C

Positive Reactive Energy Phase A

Positive Reactive Energy Phase B

Positive Reactive Energy Phase C

Negative Reactive Energy Phase A

Negative Reactive Energy Phase B

Negative Reactive Energy Phase C

The Others Energy ABC variables are obtained by the relations:

$$POS\ ENERGY\ ABC = POS\ ENERGY\ A + POS\ ENERGY\ B + POS\ ENERGY\ C$$

$$NEG\ ENERGY\ ABC = NEG\ ENERGY\ A + NEG\ ENERGY\ B + NEG\ ENERGY\ C$$

$$ENERGY\ ABC = POS\ ENERGY\ A - NEG\ ENERGY\ B$$

$$POS\ REACT\ ENERGY\ ABC = POS\ REACT\ ENERGY\ A + POS\ REACT\ ENERGY\ B + POS\ REACT\ ENERGY\ C$$

$$NEG\ REACT\ ENERGY\ ABC = NEG\ REACT\ ENERGY\ A + NEG\ REACT\ ENERGY\ B + NEG\ REACT\ ENERGY\ C$$

$$REACT\ ENERGY\ ABC = POS\ REACT\ ENERGY\ ABC - NEG\ REACT\ ENERGY\ B$$

8.1. Energy counter overflow

The max value reached by each Energy variable counters is 9 999 999, 999 after that a new increment of 0,001 will reset the counter to 0,000.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

8.2. Non volatile memory Energy backup

The following Energy variables are write on a non-volatile memory (using a Fe RAM technology):

- Integer and fractionary part of phase A positive Energy
- Integer and fractionary part of phase B positive Energy
- Integer and fractionary part of phase C positive Energy
- Integer and fractionary part of phase A negative Energy
- Integer and fractionary part of phase B negative Energy
- Integer and fractionary part of phase C negative Energy
- Integer and fractionary part of phase A positive Reactive Energy
- Integer and fractionary part of phase B positive Reactive Energy
- Integer and fractionary part of phase C positive Reactive Energy
- Integer and fractionary part of phase A negative Reactive Energy
- Integer and fractionary part of phase B negative Reactive Energy
- Integer and fractionary part of phase C negative Reactive Energy

The energy values are written with a round robin policy. Each energy value is written at most every 2 seconds.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

9. Setup a rogowski coil probe for S203RC-D model

S203RC-D can be used with Rogowski coil of various input full scale.

The most common Rogowski coil probes are the models:

Model +-100mV/1000A

Model +-50mV/1000A

NOTE:

A +-100mV/1000A Rogowski can be used also like a:

+-200mV/2000A or +-50mV/500A

A+-50mV/1000A Rogowski can be used also like a


+-100mV/2000A or +-200mV/4000A

The following table shows the configurations for the most common types of rogoski coil:


ROGOWSKI COIL MODEL	*EASY SETUP ROGOWSKI COIL PROBE INPUT FULL SCALE*	*EASY SETUP CURRENT USER TARATURE MULTIPLIER PHASE A,B,C*	*S203RC-D CURRENT FULL SCALE*
+-100mV/1000A	+-100mV	1,000 (Default)	1000 A
	+-200mV	2,000	2000 A
	+-50mV	0,500	500 A
+-50mV/1000A	+-50mV	1,000 (Default)	1000 A
	+-100mV	2,000	2000 A
	+-200mV	4,000	4000 A
+-333mV/1000A	+-200mV	0,6006	600,6 A

The Rogoski probe input full scale can be configured in Easy Setup here:

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

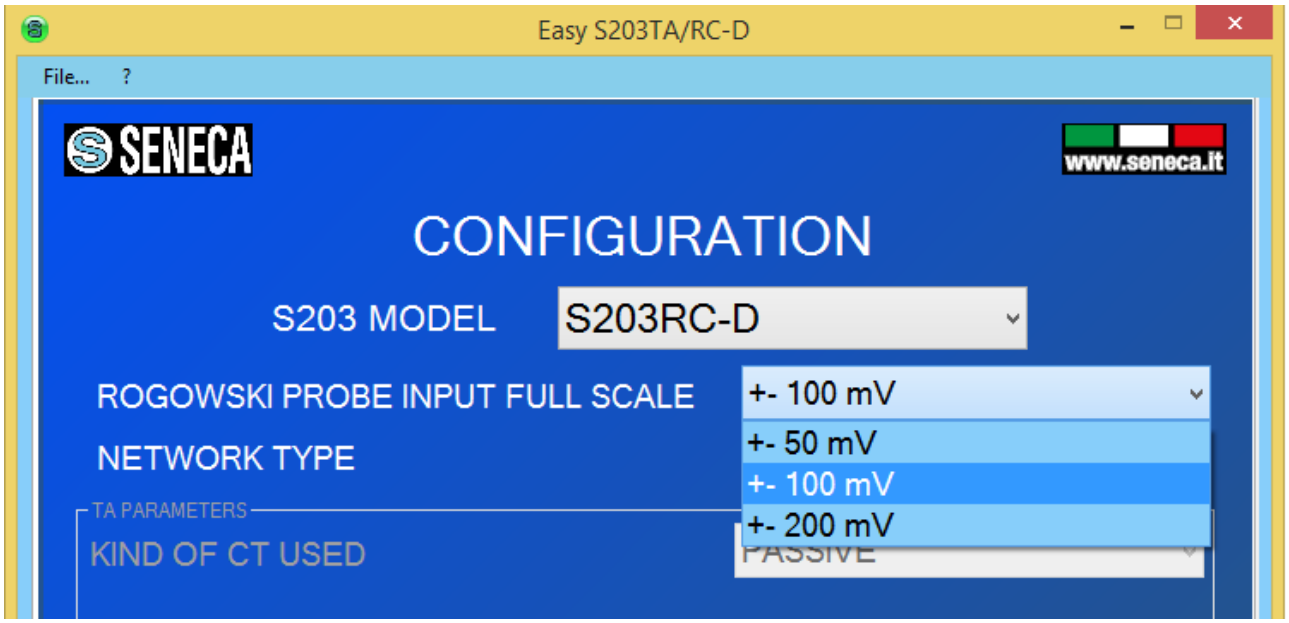

Set the right full scale on S203RC-D for various Rogowski coil type and/or the user tarature multiplication factor for current phase A,B and C (From Easy Setup software or by menu -> user tarature->current phase A,B,C).

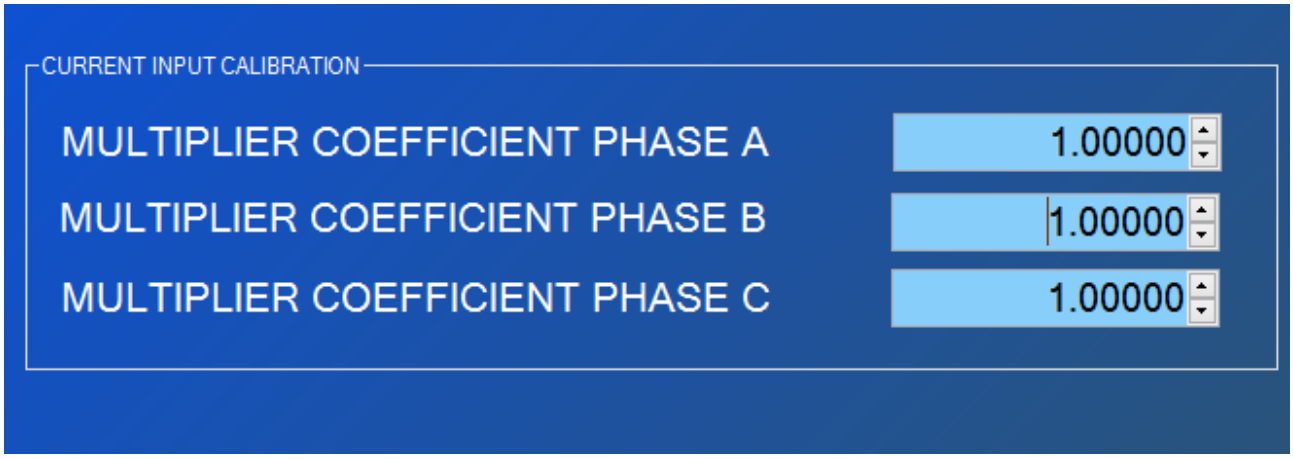

For use with a different Rogoski Coil Model you must calculate the right coefficient using this formula (Note that the "$Rogowski\ Probe\ Input\ Full\ Scale$ [mV]" can only be 50,100 or 200 mV):

$$Current\ Multiplier\ User\ Tarature_{A,B,C} = \frac{(S203RC\ Rogowski\ Probe\ Input\ Full\ Scale\ [mV])}{Rogowski\ Full\ Scale\ Input\ [mV]} \times \frac{Rogowski\ Full\ Scale\ Output\ [A]}{1000}$$

$$Maximum\ S203RC - D\ Current\ Measure = Current\ Multiplier\ User\ Tarature_{A,B,C} \times 1000\ [A]$$

For example:

For a Rogowski Coil model of +-250mV/1000A use the Maximum full Scale Input (200mV):

$$Current\ Multiplier\ User\ Tarature_{A,B,C} = \frac{200}{250} \times \frac{1000}{1000} = 0.800$$

The same value must be inserted on all the A,B,C current coefficient.

The Maximum current Measured by the S203RC-D will be:

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

$$Maximum\ S203RC-D\ Current\ Measure = 0.8 \times 1000\ [A] = 800\ A$$

10. Serial Communication

The models S203TA-D and S203RC-D feature it's the serial communication ability.

Two serial ports are available: a RS485 port and an USB port.

The RS485 port and USB port can't work both at the same time, the first byte received from the USB port will switch the communication from RS485 to USB.

After 5 seconds without a USB byte received the communication return to RS485.

The protocol supported for both ports is Modbus RTU slave, for more information about this protocol please refer to Modbus specification website:

http://www.modbus.org/specs.php

The default configuration for RS485 port is:


- Modbus station address: 1
- baud rate: 38400 baud
- parity: none
- data bit: 8
- stop bit: 1

Please note that the device must reboot after any modification to the RS485 communication parameters to work properly.

The configuration for USB port is fixed and not configurable:

- Modbus station address: 1
- baud rate: 38400 baud
- parity: none
- data bit: 8
- stop bit: 1

10.1. RS485 Serial Communication Electrical connection

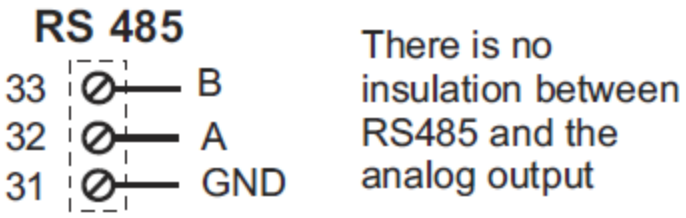

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

10.2. Modbus RTU protocol

All registers are “Holding register” (Read Modbus function 3) with the convention that the first register is the 40001 address.

The following Modbus functions are supported:

Read Single Modbus Register (function 3)

Write Single Modbus Register (function 6)

Write Multiple Modbus Registers (function 16)

All values in 32bits are stored into 2 consecutive registers, for example:

VRMS A in floating point 32 bits is stored into registers 40135 and 40136, the Most significant word is the register 40135, the less significant word is the 40136.

So the 32bits value is obtained by the following relation:

$$VRMS\ A = Reg40136 + (Reg40135 \times 2^{16}) = Reg40136 + (Reg40135\ \times 65536)$$

10.2.1. Abbreviation used

In the following table this abbreviations are used:

“MS” = Most significant
“LS” = Less significant
“MSB” = Most significant Byte
“LSB” = Less significant Byte
“MSW” = Most significant Word (16 bits)
“LSW” = Less significant Word (16 bits)
“R” = Read only register
“RW” = Read and write register

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

“Unsigned 16 bits” = Unsigned 16 bits register
“Signed 16 bits” = 16 bits register with sign
“Float 32 bits” = Floating point single precision 32 bits (IEEE 754) register
“0x” = Hexadecimal Value

Default communication parameters, RS485: 38400 baud, 8N1.

Default communication parameters, USB: 38400 baud, 8N1.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

10.2.2. Modbus Register Addresses

Register Name	Comment	Register Type	R/W	Default value or Start Value	Modbus Address	Offset
MachineID	Module ID code	Unsigned 16 bits	R	0x4F00	40001	0
Phase linked to analog output	Phase retransmitted in analog output: 0=phase A, 1=phase B, 2=phase C, 3=three phase	Unsigned 16 bits	RW	3	40017	16
CT Ratio	Current transformer numerator for CT ratio value (example: if this 32 bits register is 10.0, CT ratio is 10/5).	Float 32 bits	RW	5.0	40018(MS) 40019(LS)	17 18
StartScale IN	Start scale value for input in use. Default value depends on the selected type of input	Float 32 bits	RW	-1.0 for cosfi 0 others	40020(MS) 40021(LS)	19 20
EndScale IN	End scale value for input in use. Default value depends on the selected type of input	Float 32 bits	RW	Vrms = 600 V Irms = 5 A Active Energy = 9000 W Cosfi = 1	40022(MS) 40023(LS)	21 22
Line frequency compensation	Line Frequency fluctuation compensation: 0 = NO 1 = YES	Unsigned 16 bits	RW	0	40024	23
MB_Address	RS485 Modbus address value	Unsigned 8 bits	RW	1	40025 MSB (Bit [15:8])	24
Parity	RS485 Communication parity Parity: no parity=0 even = 1 odd=2	Unsigned 8 bits	RW	0	40025 LSB (Bit [2:0])	24
MB_Baudrate	RS485 Port baudrate value: 0x0000 = 2400 0x0100 = 4800; 0x0200= 9600; 0x0300 = 19200; 0x0400 = 38400; 0x0500 = 57600; 0x0600 = 115200;	Unsigned 16 bits	RW	0x0400 (38400 baud)	40026	25
Insertion type	0=ARON 1=3 or 4 wires 2=single phase	Unsigned 16 bits	RW	1	40027	26
Line frequency	Select the line frequency: 0=50 Hz, 1=60 Hz	Unsigned 16 bits	RW	0	40028	27
Modbus Stop Bits	Number of stop bits for modbus protocol (only for RS485 port) 0= 1 stop bit 1= 2 stop bits	Unsigned 16 bits	RW	0	40029	28

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Measure linked To analog output	0=VRMS, 1=IRMS, 2=Active power, 3=Cosfi	Unsigned 16 bits	RW	2	40030	29
Start Scale OUTPUT	Start scale value for output in use.	Float 32 bits	RW	4.0 mA	40031(MS) 40032(LS)	30 31
End Scale OUTPUT	End scale value for output in use.	Float 32 bits	RW	20.0 mA	40033(MS) 40034(LS)	32 33
Digital output energy ratio	**0 = the digital output it's in "Energy sign configuration"** Other values: Digital output make a pulse when energy has an increment of a given value of energy E. Default value is 1. Measure unit of the energy value is Wh (or Varh), KWh (or KVarh), MWh (or MVarh), depending on the selected measure unit of "Energy ratio" register.	Unsigned 32 bits	RW	1	40035(MS) 40036(LS)	34 35
Active Energy ratio	Configure measure unit of energy. to set Wh write 1 to set KWh write 1000 to set MWh write 1000000 etc…	Float 32 bits	RW	1000.0 (KWh)	40037(MS) 40038(LS)	36 37
Command aux 1	See Command register	-	W	0	40039	38
Command aux 2	See Command register	-	W	0	40040	39
TV ratio	Voltage transformer ratio value	Float 32 bits	RW	1.0	40041(MS) 40042(LS)	40 41
Phase linked to digital output	Selected phase to switch the digital output (if digout function is "energy sign configuration") 0=phase A, 1=phase B, 2=phase C, 3=three phase	Unsigned 16 bits	RW	3	40043	42
Model Type	0 = S203TA-D 1 = S203RC-D (Input suitable for a +-50mV rogowski coil full scale) 2 = S203RC-D (Input suitable for a +-100mV rogowski coil full scale) 3 = S203RC-D (Input suitable for a +-200mV rogowski coil full scale)	Unsigned 16 bits	RW	0 for S203TA-D 2 for S203RC-D	40044	43
Digital Output Logic	Select the logic for digital output switching. 0 = Normally open 1 = Normally close	Unsigned 16 bits	RW	0	40047	46
Reactive Energy ratio	Configure measure unit of reactive energy.	Float 32 bits	RW	1000.0 (KVarh)	40048(MS) 40049(LS)	47 48

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	to set Varh write 1 to set KVarh write 1000 to set MVarh write 1000000 etc…					
Cfg flags	Control flags bitwise. (0 = LSB) Bit 0 = energy values protection from reset through RS485 if set to 1 enable the protection.	Unsigned 16 bits	RW	0	40050	49
Demand Time	Time (minutes) on which the average active power is evaluated (0 = function disabled)	Unsigned 16 bits	RW	15	40051	50
Cut off current	Minimum current (mA) necessary to activate the energy counter. Under this value the phase IRMS is also set to 0. For S203TA-D model the value to enter is after the CT. For example if a 50/5 CT is used, and the cut-off current is set to 50mA under (50/5)*50mA = 500mA the current value is set to 0mA and the energy counter is stopped. For S203RC-D model the value to enter is the real current value see chapter in the manual for more info.	Unsigned 16 bits	RW	50 mA	40052	51
Command	Command register. To reset the device, write ***0xDEAD*** in Command register To reset the Peak Values of: Phase A MAX POWER 3-Phase MAX POWER Phase A MAX REACT. POWER 3-Phase MAX REACT. POWER Write ***0xB01B*** in Command register To reset energy values of: Energy A Energy B Energy C Energy ABC Reactive Energy A Reactive Energy B Reactive Energy C Reactive Energy ABC Phase A pos energy Phase B pos energy	Unsigned 16 bits	RW	0	40131	130

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	Phase C pos energy 3-phase pos energy Phase A neg energy Phase B neg energy Phase C neg energy 3-phase neg energy Phase A pos react. energy Phase B pos react. energy Phase C pos react. energy 3-phase pos react. energy Phase A neg react. energy Phase B neg react. energy Phase C neg react. energy 3-phase neg react. energy Write ***0xB01A*** in Command register To set a positive energy value for phase A, write the value ***(in integer unsigned 32 bits format)*** in Command aux 1 (high part) and command aux 2 (low part), then write ***0xBACA*** in Command register To set a positive energy value for phase B, write the value ***(in integer unsigned 32 bits format)*** in Command aux 1 (high part) and command aux 2 (low part), then write ***0xBACB*** in Command register To set a positive energy value for phase C, write the value ***(in integer unsigned 32 bits format)*** in Command aux 1 (high part) and command aux 2 (low part), then write ***0xBACC*** in Command register To set a negative energy value for phase A, write the value ***(in integer unsigned 32 bits format, the firmware add itself the sign)*** in Command aux 1 (high part) and command aux 2 (low part), then write ***0xBACD*** in Command register To set a negative energy value for phase B, write the value ***(in integer unsigned 32 bits format, the firmware add itself the sign)*** in Command aux 1 (high part) and command aux 2 (low part), then write ***0xBACE*** in					

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	Command register To set a negative energy value for phase C, write the value ***(in integer unsigned 32 bits format, the firmware add itself the sign)*** in Command aux 1 (high part) and command aux 2 (low part), then write ***0xBACF*** in Command register					
Status	Bit 0 = communication error Bit 3 = Vrms > 45 V for phase A Bit 4 = Vrms > 45 V for phase B Bit 5 = Vrms > 45 V for phase C Bit 6 = Sequence order phase status (Correct Sequence R-> S -> T will put the bit to 1 else 0) - only for 4-wire or 3-phase without neutral Bit 7 = Irms > cut off current for phase A Bit 8 = Irms > cut off current for phase B Bit 9 = Irms > cut off current for phase C Bit 15 = Feram error	Unsigned 16 bits	R	0	40133	132
VA	Voltage measure for phase A to Neutral [V] (See 41028(MS)-41029(LS) for VAB concatenated Voltage)	Float 32 bits	R	0.0	40135(MS) 40136(LS)	134 135
VB	Voltage RMS measure for phase B to Neutral [V] (See 41030 (MS)- 41031 (LS) for VBC concatenated Voltage)	Float 32 bits	R	0.0	40137(MS) 40138(LS)	136 137
VC	Voltage RMS measure for phase C to Neutral [V] (See 41032 (MS)- 41033 (LS) for VCA concatenated Voltage)	Float 32 bits	R	0.0	40139(MS) 40140(LS)	138 139
V ABC	Concatenated Voltage RMS measure for 3-phase [V]	Float 32 bits	R	0.0	40141(MS) 40142(LS)	140 141
I A [mA]	Current RMS measure for phase A, [mA] (See 40958(MS)-40959(LS) for value in A instead of mA)	Float 32 bits	R	0.0	40143(MS) 40144(LS)	142 143
I B [mA]	Current RMS measure for phase B, [mA]	Float 32 bits	R	0.0	40145(MS) 40146(LS)	144 145

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	(See 40960(MS)-40961(LS) for value in A instead of mA)					
I C [mA]	Current RMS measure for phase C, [mA] (See 40962(MS)-40963(LS) for value in A instead of mA)	Float 32 bits	R	0.0	40147(MS) 40148(LS)	146 147
I ABC [mA]	Current RMS measure for phase 3-phase, [mA rms]	Float 32 bits	R	0.0	40149(MS) 40150(LS)	148 148
P ACTIVE A	Active power measure for phase A, [Watt]	Float 32 bits	R	0.0	40151(MS) 40152(LS)	150 151
P ACTIVE B	Active power measure for phase B, [Watt]	Float 32 bits	R	0.0	40153(MS) 40154(LS)	152 153
P ACTIVE C	Active power measure for phase C, [Watt]	Float 32 bits	R	0.0	40155(MS) 40156(LS)	154 155
P ACTIVE ABC	Active power measure for 3-phase, [Watt]	Float 32 bits	R	0.0	40157(MS) 40158(LS)	156 157
Q A	Reactive power measure for phase A, [VAR]	Float 32 bits	R	0.0	40159(MS) 40160(LS)	158 159
Q B	Reactive power measure for phase B, [VAR]	Float 32 bits	R	0.0	40161(MS) 40162(LS)	160 161
Q C	Reactive power measure for phase C, [VAR]	Float 32 bits	R	0.0	40163(MS) 40164(LS)	162 163
Q ABC	Reactive power measure for phase ABC, [VAR]	Float 32 bits	R	0.0	40165(MS) 40166(LS)	164 165
S A	Apparent power measure for phase A [VA]	Float 32 bits	R	0.0	40167(MS) 40168(LS)	166 167
S B	Apparent power measure for phase B [VA]	Float 32 bits	R	0.0	40169(MS) 40170(LS)	168 169
S C	Apparent power measure for phase C [VA]	Float 32 bits	R	0.0	40171(MS) 40172(LS)	170 171
S ABC	Apparent power measure for 3-phase, [VA]	Float 32 bits	R	0.0	40173(MS) 40174(LS)	172 173
Power Factor A	Power factor measure for phase A	Float 32 bits	R	0.0	40175(MS) 40176(LS)	174 175
Power Factor B	Power factor measure for phase B	Float 32 bits	R	0.0	40177(MS) 40178(LS)	176 177
Power Factor C	Power factor measure for phase C	Float 32 bits	R	0.0	40179(MS) 40180(LS)	178 179
Power factor **ABC**	Power factor measure for phase ABC	Float 32 bits	R	0.0	40181(MS) 40182(LS)	180 181
Frequency	Frequency measure, in Hz (from phase A)	Float 32 bits	R	0.0	40183(MS) 40184(LS)	182 183
Energy A	Energy measure for phase A, measure unit depending on the selected measure unit (mWh, Wh, kWh, MWh)	Float 32 bits	R	0.0	40185(MS) 40186(LS)	184 185
Energy B	Energy measure for phase B, measure unit depending on the selected measure unit (mWh, Wh, kWh, MWh)	Float 32 bits	R	0.0	40187(MS) 40188(LS)	186 187
Energy C	Energy measure for phase C, measure unit depending on the selected measure unit (mWh, Wh, kWh, MWh)	Float 32 bits	R	0.0	40189(MS) 40190(LS)	188 189
Energy ABC	Energy measure for 3-phase, measure unit depending on	Float 32	R	0.0	40191(MS) 40192(LS)	190 191

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	the selected measure unit (mWh, Wh, kWh, MWh)	bits				
Screen Display mode	1=auto change screen page 0=manual change screen page	Unsigned 16 bits	RW	0	40222	221
Display menù Language	Language of items displayed: 1=italiano 0=english	Unsigned 16 bits	RW	0	40223	222
Reactive Energy A	Reactive Energy measure for phase A, measure unit depending on the selected measure unit (mVARh, VARh, kVARh, MVARh)	Float 32 bits	R	0.0	40225(MS) 40226(LS)	224 225
Reactive Energy B	Reactive Energy measure for phase B, measure unit depending on the selected measure unit (mVARh, VARh, kVARh, MVARh)	Float 32 bits	R	0.0	40227(MS) 40228(LS)	226 227
Reactive Energy C	Reactive Energy measure for phase C, measure unit depending on the selected measure unit (mVARh, VARh, kVARh, MVARh)	Float 32 bits	R	0.0	40229(MS) 40230(LS)	228 229
Reactive Energy ABC	Reactive Energy measure for 3-phase, measure unit depending on the selected measure unit (mVARh, VARh, kVARh, MVARh)	Float 32 bits	R	0.0	40231(MS) 40232(LS)	230 231
Start scale INPUT for VRMS (analog output)	Start scale for input, with reference to the analog output [V]	Float 32 bits	RW	0.0	40505(MS) 40506(LS)	504 505
Start scale INPUT for IRMS (analog output)	Start scale for input, with reference to the analog output [A]	Float 32 bits	RW	0.0	40507(MS) 40508(LS)	506 507
Start scale INPUT for P ACTIVE (analog output)	Start scale for input, with reference to the analog output [W]	Float 32 bits	RW	0.0	40509(MS) 40510(LS)	508 509
Start scale INPUT for COSFI (analog output)	Start scale for input, with reference to the analog output [W]	Float 32 bits	RW	-1.0	40511(MS) 40512(LS)	510 511
End scale INPUT for VRMS (analog output)	End scale for input, with reference to the analog output retransmission [V]	Float 32 bits	RW	600.0	40513(MS) 40514(LS)	512 513
End scale INPUT for IRMS (analog output)	End scale for input, with reference to the analog output retransmission [A]	Float 32 bits	RW	5.0	40515(MS) 40516(LS)	514 515
End scale IN for PACT (analog	End scale for input, with reference to the analog output retransmission [W]	Float 32 bits	RW	9000.0	40517(MS) 40518(LS)	516 517

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

output)						
End scale IN for COSFI (analog output)	End scale for input, with reference to the analog output retransmission	Float 32 bits	RW	1.0	40519(MS) 40520(LS)	518 519
Digital out counter configuration	Select the digital output retransmission between: Digital output positive energy, phase A (write “0”) Digital output positive energy, phase B (write “1”) Digital output positive energy, phase C (write “2”) Digital output negative energy, phase A (write “3”) Digital output negative energy, phase B (write “4”) Digital output negative energy, phase C (write “5”) Digital output positive energy, threephase (write “6”) Digital output negative energy, threephase (write “7”)	Unsigned 16 bits	RW	6	40521	520
User tarature – current for phase A	User Tarature coefficient for phase A current	Float 32 bits	RW	1.0	40524(MS) 40525(LS)	523 524
User tarature – current for phase B	User Tarature coefficient for phase B current	Float 32 bits	RW	1.0	40526(MS) 40527(LS)	525 526
User tarature – current for phase C	User Tarature coefficient for phase C current	Float 32 bits	RW	1.0	40528(MS) 40529(LS)	527 528
User tarature – voltage for phase A	User Tarature coefficient for phase A voltage	Float 32 bits	RW	1.0	40530(MS) 40531(LS)	529 530
User tarature – voltage for phase B	User Tarature coefficient for phase B voltage	Float 32 bits	RW	1.0	40532(MS) 40533(LS)	531 532
User tarature – voltage for phase C	User Tarature coefficient for phase C voltage	Float 32 bits	RW	1.0	40534(MS) 40535(LS)	533 534
Firmware code	Device Firmware code	Unsigned 16 bits	R	-	40901	900
Output type	Type for analog output: 0 = Voltage Output 1 = Current Output	Unsigned 16 bits	RW	1	40921	920
Phase A pos energy	Sum of energy for phase A (only positive)	Float 32 bits	R	0.0	40942 (MS) 40943 (LS)	941 942
Phase A neg energy	Sum of energy for phase A (only negative)	Float 32 bits	R	0.0	40944 (MS) 40945 (LS)	943 944
Phase B pos energy	Sum of energy for phase B (only positive)	Float 32 bits	R	0.0	40946 (MS) 40947 (LS)	945 946
Phase B neg energy	Sum of energy for phase B (only negative)	Float 32 bits	R	0.0	40948 (MS) 40949 (LS)	947 948

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000


Phase C pos energy	Sum of energy for phase C (only positive)	Float 32 bits	R	0.0	40950 (MS) 40951 (LS)	949 950
Phase C neg energy	Sum of energy for phase C (only negative)	Float 32 bits	R	0.0	40952 (MS) 40953 (LS)	951 952
3-phase pos energy	Sum of energy for three phases (only positive)	Float 32 bits	R	0.0	40954 (MS) 40955 (LS)	953 954
3-phase neg energy	Sum of energy for three phases (only negative)	Float 32 bits	R	0.0	40956 (MS) 40957 (LS)	955 956
IA [A]	Current RMS measure for phase A, [A]	Float 32 bits	R	0.0	40958(MS) 40959(LS)	957 958
IB [A]	Current RMS measure for phase B, [A]	Float 32 bits	R	0.0	40960(MS) 40961(LS)	959 960
IC [A]	Current RMS measure for phase C, [A]	Float 32 bits	R	0.0	40962(MS) 40963(LS)	961 962
IABC [A]	Current RMS measure for phase 3-phase, [A]	Float 32 bits	R	0.0	40964(MS) 40965(LS)	963 964
Phase A pos Reactive energy	Sum of Reactive energy for phase A (only positive)	Float 32 bits	R	0.0	41002 (MS) 41003 (LS)	1001 1002
Phase A neg Reactive energy	Sum of Reactive energy for phase A (only negative)	Float 32 bits	R	0.0	41004 (MS) 41005 (LS)	1003 1004
Phase B pos Reactive energy	Sum of Reactive energy for phase B (only positive)	Float 32 bits	R	0.0	41006 (MS) 41007 (LS)	1005 1006
Phase B neg Reactive energy	Sum of Reactive energy for phase B (only negative)	Float 32 bits	R	0.0	41008 (MS) 41009 (LS)	1007 1008
Phase C pos Reactive energy	Sum of Reactive energy for phase C (only positive)	Float 32 bits	R	0.0	41010 (MS) 41011 (LS)	1009 1010
Phase C neg Reactive energy	Sum of Reactive energy for phase C (only negative)	Float 32 bits	R	0.0	41012 (MS) 41013 (LS)	1011 1012
3-phase pos Reactive energy	Sum of Reactive energy for three phases (only positive)	Float 32 bits	R	0.0	41014 (MS) 41015 (LS)	1013 1014
3-phase neg Reactive energy	Sum of Reactive energy for three phases (only negative)	Float 32 bits	R	0.0	41016 (MS) 41017 (LS)	1015 1016
Phase A MAX POWER	Maximum absolute value of Phase A active power (calculated since the last device reset.)	Float 32 bits	R	0.0	41018 (MS) 41019 (LS)	1017 1018
3-Phase MAX POWER	Maximum absolute value of Phases ABC active power (calculated since the last device reset.)	Float 32 bits	R	0.0	41020 (MS) 41021 (LS)	1019 1020
Phase A MAX REACTIVE POWER	Maximum absolute value of Phase A reactive power (calculated since the last device reset.)	Float 32 bits	R	0.0	41022 (MS) 41023 (LS)	1021 1022
3-Phase MAX REACTIVE POWER	Maximum absolute value of Phase ABC reactive power (calculated since the last	Float 32	R	0.0	41024 (MS) 41025 (LS)	1023 1024

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

	device reset.)	bits				
Average active power	Average value of 3-phases (Phase A if 1-wire insertion is selected) active power. Value is estimated for the last N minutes, where N is the “demand time value” selected by the user. The Calculation is obtained by a moving average and is updated every 1 minute.	Float 32 bits	R	0.0	41026 (MS) 41027 (LS)	1025 1026
VAB	Voltage measure for phase A to phase B [V]	Float 32 bits	R	0.0	41028 (MS) 41029 (LS)	1027 1028
VBC	Voltage measure for phase B to phase C [V]	Float 32 bits	R	0.0	41030 (MS) 41031 (LS)	1029 1030
VCA	Voltage measure for phase C to phase A [V]	Float 32 bits	R	0.0	41032 (MS) 41033 (LS)	1031 1032

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

11. DEBUG LEDs

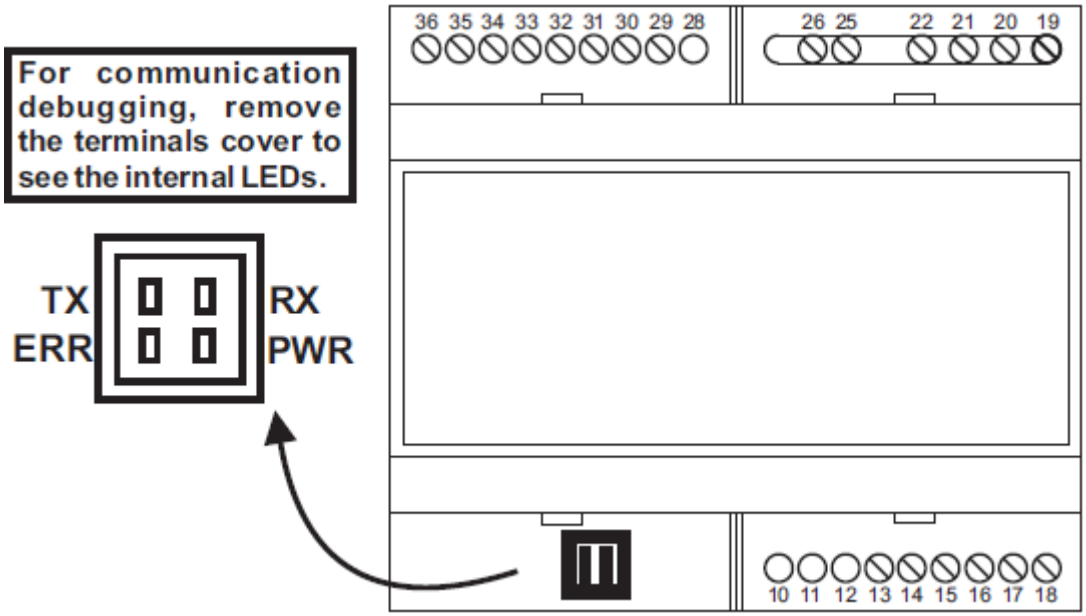

LED	LED status	Meaning
PWR	Constant light	The module power is on
ERR	Constant light	Measure of voltage: <45Vac (at least one of the phases used)
RX	Blinking light	The module received a data packet from RS485
TX	Blinking light	The module sent a data packet to the RS485

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

12. THE KIT-USB

The KIT-USB can be obtained from Seneca (Can be bought also from the E-commorce Website www.seneca.it)



The kit contain:

- A CD with the USB drivers for Windows and the Easy Setup software
- A standard mini-B and micro-USB USB Cables

  The USB drivers can also be downloaded from the website:
  http://www.ftdichip.com/Drivers/VCP.htm

  The Easy Setup software can also be freely downloaded from the website:
  www.seneca.it

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

13. WINDOWS USB DRIVERS INSTALLATION


For installing the USB drivers follow this procedure:

- Power up the S203TA-D / S203RC-D and connect the USB to the PC, the new hardware it's detected:




- If you don't have an internet connection insert the CD and install the FTDI driver or download the drivers from the website http://www.ftdichip.com/Drivers/VCP.htm

- If you have an internet connection the driver is automatically searched into the Windows Update database:

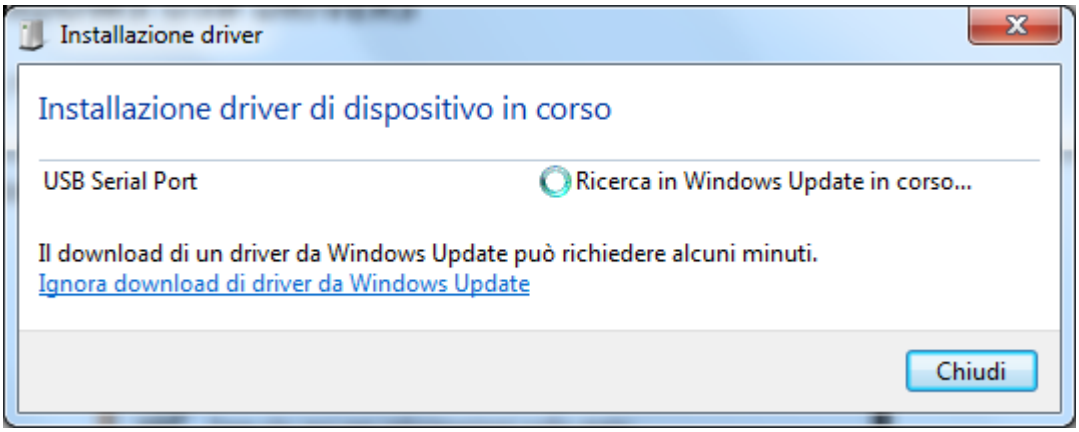

- After 3-4 minutes the driver is installed and the USB (USB Serial Port) is ready to use :

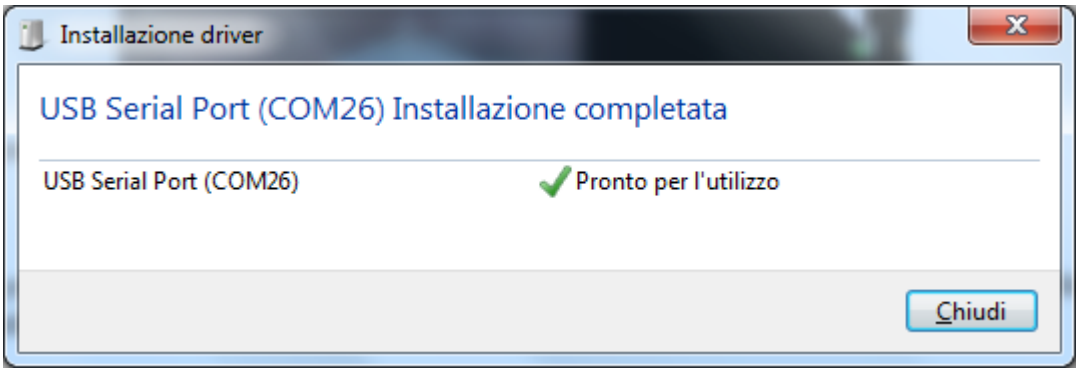

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

14. OTHERS OPERATING SYSTEM DRIVERS:

From the website:

http://www.ftdichip.com/Drivers/VCP.htm


you can download the USB drivers for various operating systems like:

Windows xp, Vista, Windows 8
Linux
MAC OS
Windows CE

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

15. EASY SETUP SOFTWARE for Windows

From the Website www.seneca.it can be downloaded free of charge the Easy Setup suite software, select Download from the Links section:

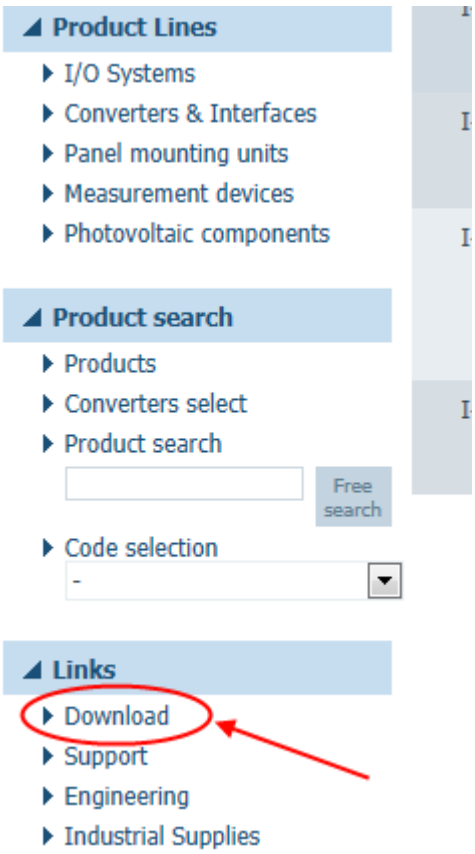

Then download the last Easy Setup version:




Easy Setup works on Windows XP 32/64 bits, Windows Vista 32/64 bits, Windows 7 32/64 bits, Windows 8 32/64 bits.

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

If you want to configure the S203TA/RC-D by the USB you must FIRST install the USB drivers (see chapter 13).


Extract the zip file and double click on the Setup file for install the software.

From the Quick Start menu select the S203TA-D or S203RC-D model (you can also click on the tab “Analog Modbsu RTU I/O” and select the S203TA-D or S203RC-D button).

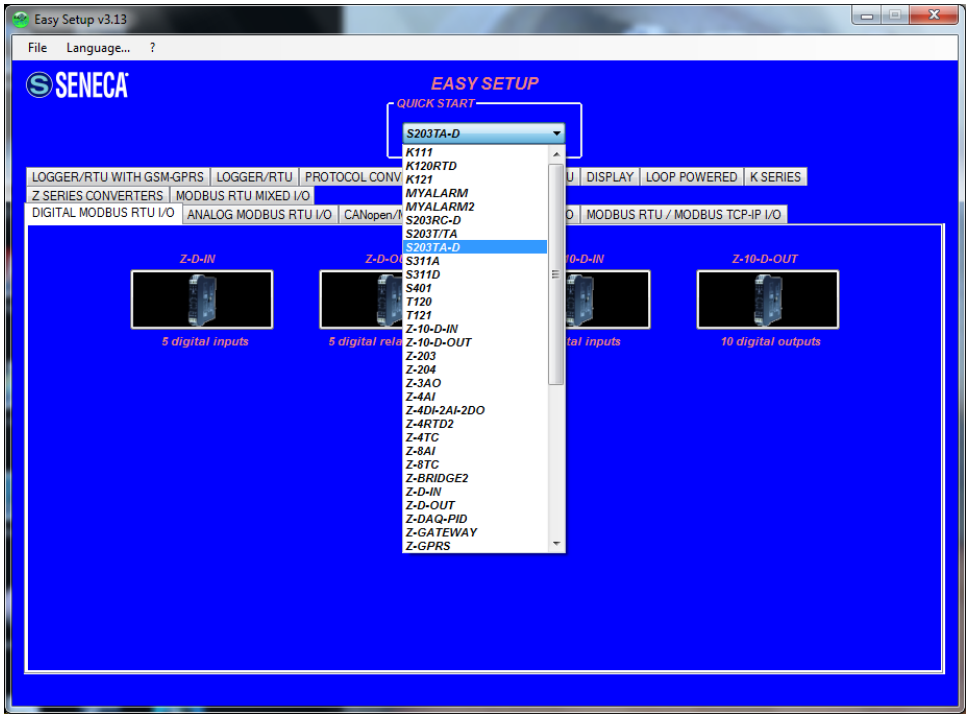

Now the configuration software “Easy S203TA/RC-D” starts:

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

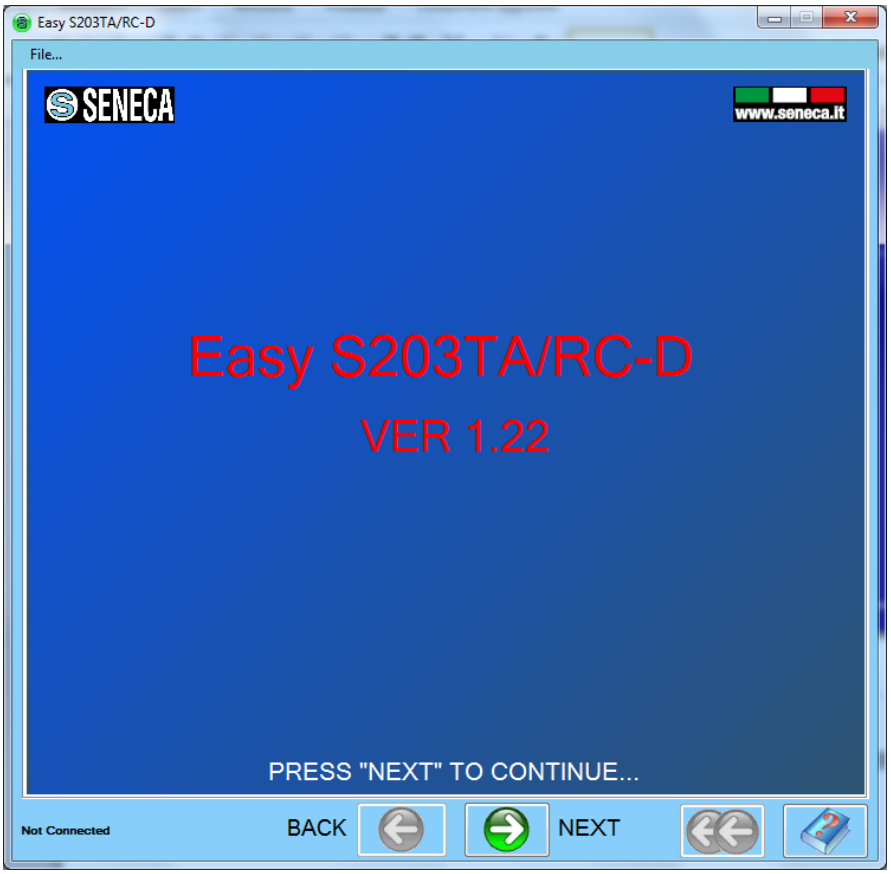

Press “Next”:


If you have previously installed the USB drivers connect the USB cable to the PC , also use a RS485 to USB converter like Seneca S117P1 (see www.seneca.it website for more info).

Although RS485 to USB converters can be used only Seneca RS485 to USB converters are tested to work with S203TA/RC-D.

Click on “AUTOMATIC SEARCH” for automatic connection to the S203TA/RC-D.

The software try to connect with all the serial ports until the S203TA/RC-D will answer:

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

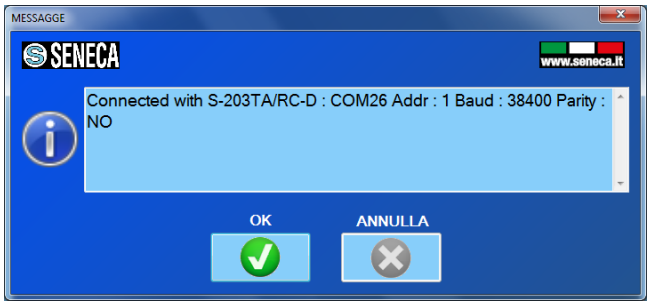

Now the configuration menu will be displayed:



15.1. Firmware Update

With a new revision of Easy Setup, Seneca can include a new S203TA/RC-D firmware.

A new firmware update can include new features or bugfix.


WARNING!

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

When the firmware update it's started don't power down or disconnect the S203TA/RC-D until all the procedure it's finished.

Power ON the S203TA/RC-D and connect it to the ***PC BY THE USB CABLE (DO NOT USE THE RS485 CONNECTION)*** (see chapter 15)

On the configuration menu click on "Software update"

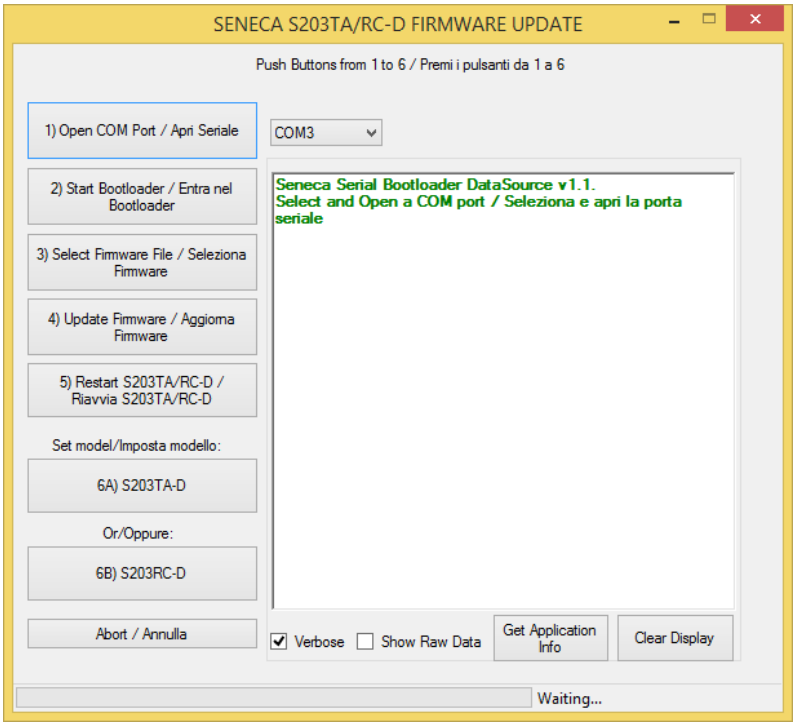


Press the 1) button for connect to the right S203TA/RC-D serial port


Press the 2) button to put the S203TA/RC-D in bootloader mode, on the S203TA/RC-D display will be displayed: "UPDATING… PLEASE WAIT…"

Press the 3) button for select the firmware to send to the S203TA/RC-D, the software will open directly the firmware directory.

LRI Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

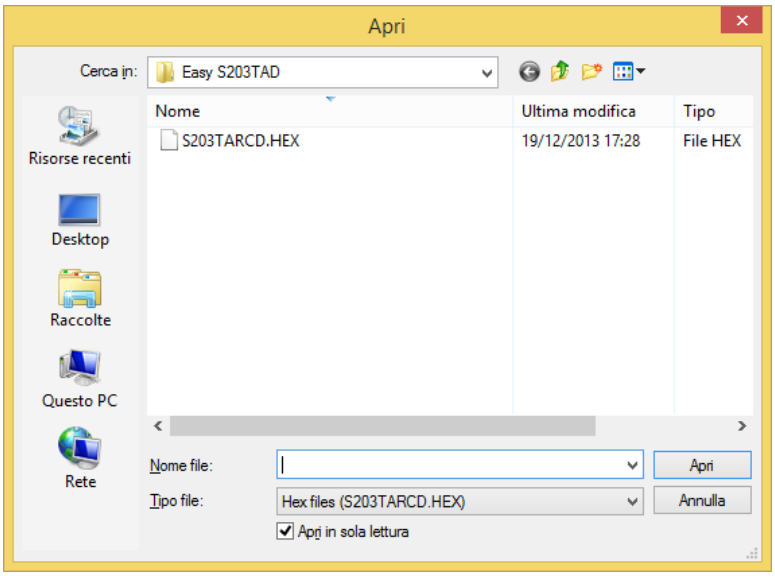


Press the 4) button to start the firmware update:

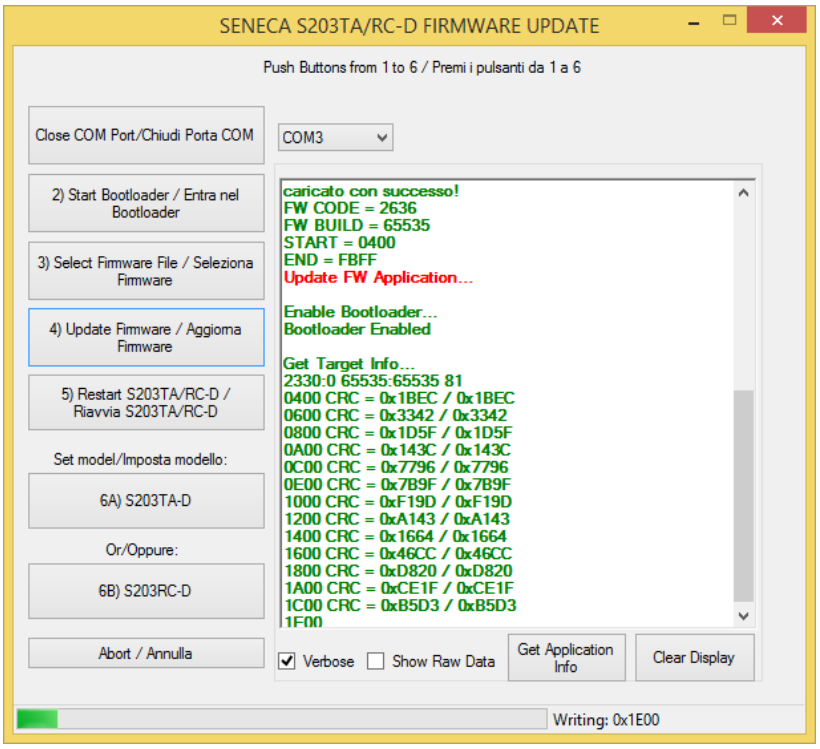

The firmware update take less than 1 minute.

When the update is finished:

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

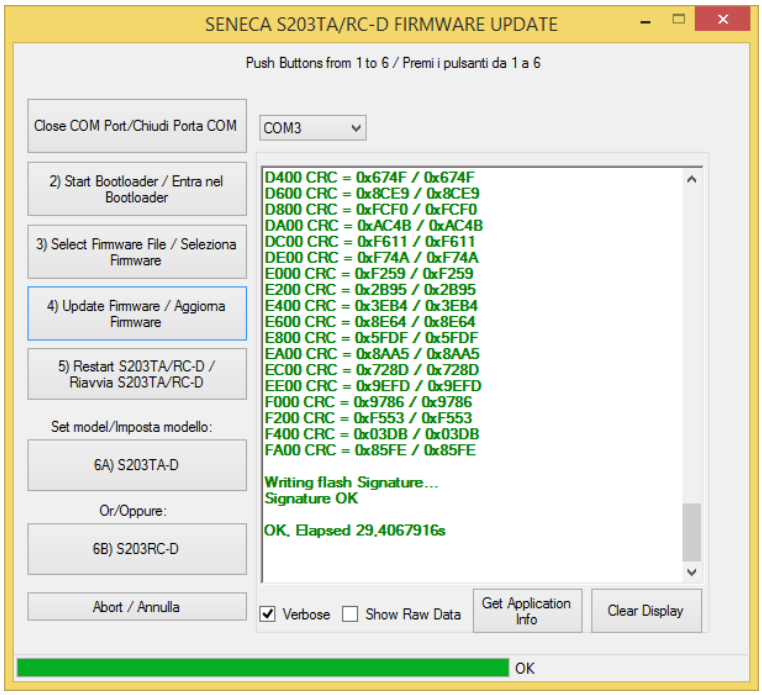

Press the 5) button to restart the S203TA/RC-D, now the board is out of the bootloader mode.

Now Set the right S203 model by the 6A) button (for S203TA-D model) or 6B) button (for S203RC-D model).

WARNING!

When the firmware update it's finished the last configuration it's overwritten by the default configuration.

For S203RC-D model you must also configure with the software Easy Setup the right Rogowski coil input full scale because this configuration can not be configured by the display menu.